


Upfitter Interface Module® + A-AIM950-B (2025+ Isuzu NPR Gas Engine)

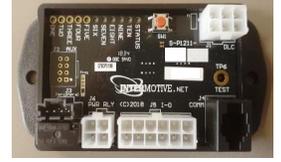

Introduction statis

The A-AIM950-B provides two major functions to facilitate the production of emergency vehicles. A fast idle feature that triggers from a number of configurable sources including battery voltage, parking brake and a discrete input. It provides 8 outputs which can be configured to turn on in response to a variety of vehicle data. These outputs are used to drive various external loads.

NOTE: Vehicle data is limited on the Isuzu NPR. Please refer to the AIM GUI for available data.

Disconnect the battery before proceeding with the installation.



WARNING

Disconnect the battery to prevent setting a check engine light.

CAUTION

All electronic products are susceptible to damage from Electrostatic Discharge or ESD. Ground yourself before handling or working with the module and harnessing by first touching chassis ground, such as the barrel of the cigarette lighter.



It is the installer's responsibility to route and secure all wiring harnesses where they cannot be damaged by sharp objects, mechanical moving parts and high heat sources. Failure to do so could result in damage to the system or vehicle and create possible safety concerns for the operator and passengers.

It is important to avoid placing the module where it could encounter strong magnetic fields from high current cabling connected to motors, solenoids, etc. Also avoid radio frequency energy from antennas or inverters next to the module. Finally, avoid high voltage spikes in vehicle wiring by always using diode clamped relays when installing upfitter circuits.

Installation Instructions

A-AIM950-B Module

Remove the lower dash panel below the steering column and find a suitable location to mount the A-AIM950-B module. Do not mount the module where it will be exposed to excessive heat. Do not mount the module until all wire harnesses are routed and secure. The last step of the installation is to mount the module.

Installation Instructions (continued)

Data Link Harness

1. Locate the S-H33CX data link harness in the kit. See picture. This will "T" into the vehicles OBDII connector.
2. Locate the vehicles OBDII Data Link Connector located below the lower left dash panel under the steering wheel area. See picture.
3. Remove OEM OBDII connector by pinching the sides and pushing it out the rear of the OEM bracket.
4. Install the white data link harness OBDII connector into the OEM bracket by pushing it in from the rear.
5. Plug the red connector from the AIM950 data link harness into the vehicles OBDII connector. Ensure the connection is fully seated and secure with the supplied wire tie.
6. Secure the harness so that it does not hang below the lower dash



OEM OBDII bracket with White AIM950 connector installed.

Fast Idle

The fast idle system controls engine idle RPM in response to a number of triggers in order to increase electrical and mechanical output of the vehicle. By default, gas engines idle at 1500 RPM while diesel engines idle at 1200 RPM.

Fast Idle Engage Input (4-Pin Connector)

Attach the S-H65BX Harness connector Pin #1 Green/White wire on the 4 pin connector to any equipment that provides a ground signal when the fast idle needs to be engaged. (PTO, pump, etc....)

Fast Idle Triggers		
Trigger Name	Trigger Conditions	Disable Conditions
Manual Engage Input	Fast Idle Engage Input wire activated	Fast Idle Engage Input wires not active
VBAT Low (if enabled)	VBAT < 12.5V (default)	VBAT > 13.5V for > 5 minutes (default)
Parking Brake (if enabled)	Parking Brake applied	Parking Brake Released

Fast Idle Preconditions

The following preconditions must be met prior to initiating Fast Idle operation:

- Vehicle speed zero
- Transmission in Park
- Accelerator pedal not applied
- Engine Coolant temperature less than 250°F
- Engine RPM must be greater than 200 and less than 2800
- Service Brake not applied
- Parking Brake must be applied if this feature is enabled

Pin Mode— AIM Application

Outputs can be configured from the factory for various modes, as described below. Momentary mode is the most commonly used, where an output is 'active' only when the proper conditions have been met.

Momentary: Output follows condition set but with a turn on delay, and a turn off delay. Setting 'On Delay' and 'Off Delay' to zero causes the output pin to simply "follow" the condition set being true (ON) and false (OFF).

Pin Mode	Momentary	Off Delay (s)	0	On Delay (s)	0
----------	-----------	---------------	---	--------------	---

Latching: This mode will latch an output pin ON, starting 'On Delay' seconds after the conditions are met, and will keep it ON even after the conditions are no longer true. It will then latch the output OFF, following 'Off Delay' seconds after the conditions are met again. Think of it as toggle on—toggle off. The simplest use would be when using a momentary button as the only input condition and setting the Delays to zero. Thus a load could be turned on by pushing a momentary button, and turned back off by pushing the button a second time.

Pin Mode	Latching	Off Delay (s)	0	On Delay (s)	0
----------	----------	---------------	---	--------------	---

Time Hold: The output pin goes ON after the conditions become true, and stays ON for the selected 'On Time', regardless of the conditions. Off Time is Not Applicable.

Pin Mode	Time Hold	Off Time (s)		On Time (s)	0
----------	-----------	--------------	--	-------------	---

Time Delay: Output is turned ON after the selected 'delay' time after the conditions are met. It stays on for selected 'On time', regardless of input conditions.

Pin Mode	Time Delay	Delay (s)	0	On Time (s)	0
----------	------------	-----------	---	-------------	---

Flashing—Momentary: Used for creating a flashing output. When conditions are met, output flashes. When conditions are no longer met, flashing stops. Flashing ON and OFF times (duty cycle) are controlled by entering the following values.

Pin Mode	Flashing - Momentary	Off Time (.1s)	0	On Time (.1s)	0
----------	----------------------	----------------	---	---------------	---

Flashing - Latching: Same as above, except flashing will continue after conditions are no longer true, and will stop when conditions become true again—toggle ON, toggle OFF. Duty cycle is controlled by the ON and OFF times.

Pin Mode	Flashing - Latching	Off Time (.1s)	0	On Time (.1s)	0
----------	---------------------	----------------	---	---------------	---

Key-Off Operation: If Key-Off operation is selected, outputs will continue to update once the key goes off. These outputs will continue to update until the vehicle goes to sleep.

Battery Operation: Battery outputs operate similarly to key-off outputs except that, when the vehicle goes to sleep, the module will stay awake. The module will sleep when all outputs are off or if the vehicle battery drops below 11.5 volts. If the vehicle CAN wakes or an input changes, the module will wake up and resume outputting.

Operation Mode: Ignition Key-Off Battery



A-AIM950-B Output pin-out definition

Outputs 2 through 8 are configurable by Intermotive as either active high (12V) or active low (ground). Each of these outputs are rated at 1/2A and are intended to drive relay coils or other low current loads. Output 1 is a high current (8A max.) output and should be fused. The output sense for Output 1 (Pin #2 Purple wire on the 4 pin connector) depends on the input at Pin #4 (Tan wire) on the 4 pin connector (i.e., 12V on Pin #4 will output 12V on Pin #2 when Output 1 is active).

The 8 outputs are defined as follows:

- Pin #1 N/C
- Pin #2 (Green wire) Output 2
- Pin #3 (White wire) Output 3
- Pin #4 (Gray wire) Output 4
- Pin #5 (Blue/White) No Connection
- Pin #6 N/C
- Pin #7 Red (Jumper to pin #12)
- Pin #8 (Brown wire) Output 5
- Pin #9 (Orange wire) Output 6
- Pin #10 (Blue wire) Output 7
- Pin #11 (Yellow wire) Output 8
- Pin #12 Red (Jumper to pin #7)

- Pin #1 (Green/White Wire) General Purpose Input 1
- Pin #2 (Purple) Output 1
- Pin #3 (Pink) General Purpose Input 2 (Optional)
- Pin #4 (Tan wire) Output 1 Source

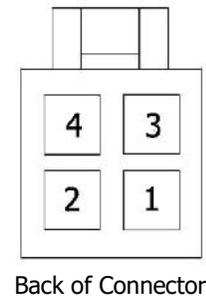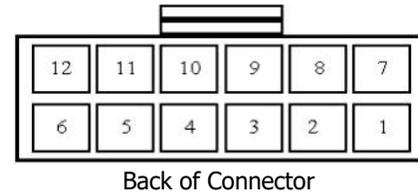

Connect the desired outputs to vehicle equipment as needed. Tape up unused leads. When connecting to relays, use relays with appropriate kick-back suppression, such as Digikey #PB682-ND. Unsuppressed relays will induce very high voltage spikes throughout modern vehicle's sensitive computer electronics and should not be used, per Ford, GM, SAE, etc.

By default, all outputs are active low and configured as follows:

- Output #1 (Purple wire) Engine Cranking
- Output #2 (Green wire) TR = Park
- Output #3 (White wire) Parking Brake Applied
- Output #4 (Gray wire) TR = Reverse
- Output #5 (Brown wire) Ignition On
- Output #6 (Orange wire) Engine Running
- Output #7 (Blue wire) Right Turn Signal On (Not available on NPR)
- Output #8 (Yellow wire) Left Turn Signal On (Not available on NPR)

Reconnect the vehicle battery

During VIN acquisition: Scrolling LED's between LED1 and LED5 indicate an error occurred while acquiring the VIN.

Verify that the chassis is supported by this product. If work was recently performed on this chassis, the VIN may have been cleared in the PCM.

A lit LED between LED 1 and LED 5 will indicate the following:

LED 1	Manufacturer Error
LED2	Model Error
LED3	Engine Error
LED4	Model Year Error
LED5	VIN Error

Post Installation System Operation Test

Perform the following tests before actually mounting the module, to allow easy viewing of the diagnostic LED's, if needed.

1. Place transmission in Park and start the engine. **Note:** Vehicle may enter Fast Idle if VBAT is low. Either wait to see if the battery charges and Fast Idle stops, or place a charger on the vehicle to disable the VBAT low trigger to allow testing of other triggers.
2. Manually engage the Fast Idle Input by having aftermarket vehicle equipment ground the Input wire. Engine speed will increase to the set RPM level. If this does not occur, check harness connections. Also see diagnostics below.
3. When Fast Idle is engaged, keep the Input wire grounded, and depress the Service Brake for 1 second. Fast idle will temporarily disengage anytime the Service Brake is pressed, and will automatically reengage after approximately 2 seconds once the Brake pedal is released.
4. Place transmission shift lever in the "Neutral" position. (Input wire still grounded). Verify the vehicle does not go into Fast Idle.
5. Verify outputs 1-8 are working correctly.

If the A-AIM950-B fails any of the above tests, check harnesses and review instructions, or check diagnostics below. If necessary, call InterMotive Technical Support at (530) 823-1048.

LEAVE IN VEHICLE Operating Instructions - Upfitter Interface Module® + A-AIM950-B (2025+ Isuzu NPR Gas Engine)

System Operation

The A-AIM950-B provides two major functions to facilitate the production of emergency vehicles. It provides a fast idle feature that triggers from a number of configurable sources including battery voltage, parking brake and a discrete input. It provides 8 outputs which can be configured to turn on in response to a variety of vehicle data. These outputs are used to drive various external loads.

Fast Idle



The fast idle system controls engine idle RPM in response to a number of triggers in order to increase electrical and mechanical output of the vehicle. By default, gas engines idle at 1500 RPM while diesel engines idle at 1200 RPM.

Fast Idle Triggers		
Trigger Name	Trigger Conditions	Disable Conditions
Manual Engage Input #1	Fast Idle Engage Input wire activated	Fast Idle Engage Input wires not active
VBAT Low (if enabled)	VBAT < 12.5V (default)	VBAT > 13.5V for > 5 minutes (default)
Parking Brake (if enabled)	Parking Brake applied	Parking Brake Released

Fast Idle Preconditions


The following preconditions must be met prior to initiating Fast Idle operation:

- Vehicle speed zero
- Transmission in Park
- Accelerator pedal must not be applied
- Engine Coolant temperature less than 230°F
- Transmission Fluid temperature less than 250°F
- Engine RPM must be greater than 200 and less than 2800
- Service Brake not applied
- Parking Brake must be applied if this feature is enabled

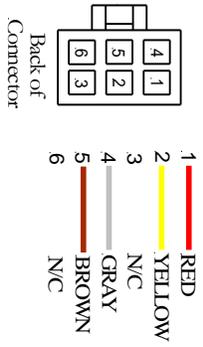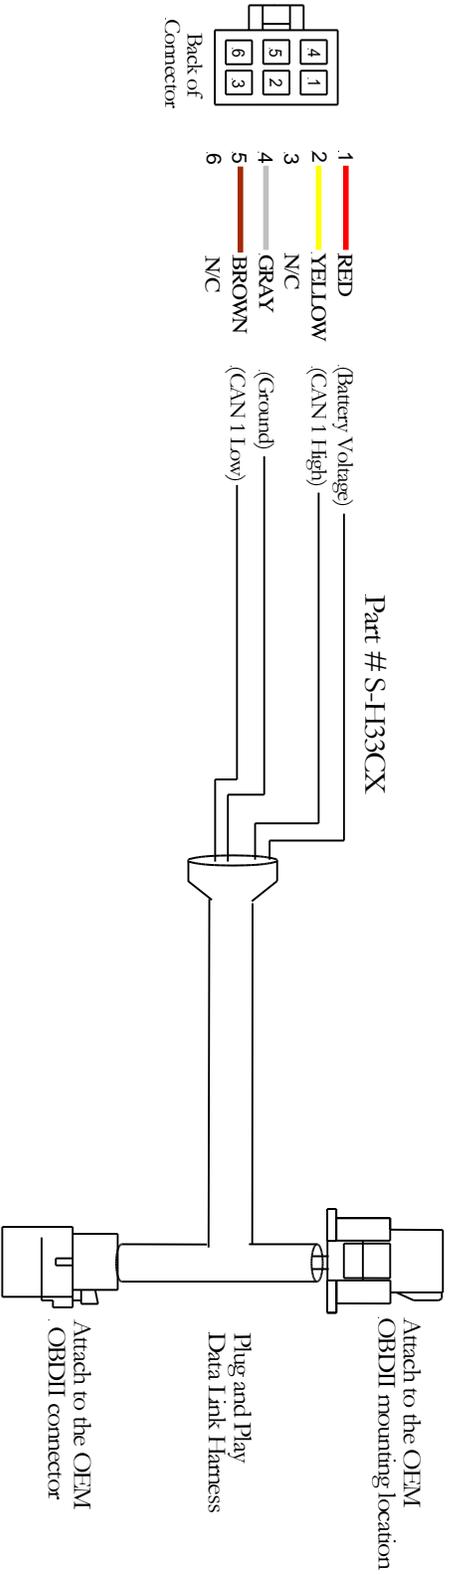


Part # S-H33CX

- 1 RED (Battery Voltage)
- 2 YELLOW (CAN 1 High)
- 3 N/C (Ground)
- 4 GRAY (CAN 1 Low)
- 5 BROWN (No Connection)
- 6 N/C

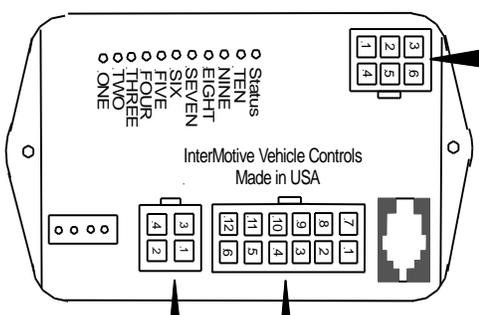


A-AIM950-B
Part # 820-00019-004

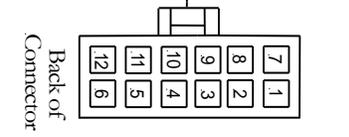

Part # S-H64BX

- 1 Not Used (Output 2)
- 2 GREEN (Output 2)
- 3 WHITE (Output 3)
- 4 GRAY (Output 4)
- 5 BLUE/WHITE (No Connection)
- 6 Not Used
- 7 RED (umper) (Output 5)
- 8 BROWN (Output 6)
- 9 ORANGE (Output 7)
- 10 BLUE (Output 8)
- 11 YELLOW (Output 8)
- 12 RED (umper)

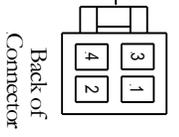

Part # S-H65BX

- 1 GREEN/WHITE (General Purpose Input 1)
- 2 PURPLE (Output 1)
- 3 PINK (General Purpose Input 2)
- 4 TAN (Output 1 Source)

Submit product registration at www.intermotive.net

If the A-AIM950-B fails any step in the Post Installation Test, review the installation instructions and the loaded configuration by running the Graphical User Interface application. If necessary, call InterMotive technical support at (530) 823-1048.