

An ISO 9001:2015 Registered Company

# B-BOM536-CC Black Out Module 2018 - 2021 Ford Expedition

Contact InterMotive for additional applications



#### Introduction

The B-BOM536-CC module has the ability to eliminate all exterior lighting (except DRL's if activated) to aid in covert operations. When activated, with the headlights turned off, the B-BOM536 will eliminate the reverse lights and the Service Brake lights.

#### **Installation Instructions**

Disconnect vehicle battery before proceeding with installation.



#### **IMPORTANT - READ BEFORE INSTALLATION**

It is the installer's responsibility to route and secure all wiring harnesses where they cannot be damaged by sharp objects, mechanical moving parts and high heat sources. Failure to do so could result in damage to the system or vehicle and create possible safety concerns for the operator and passengers.

It is important to avoid placing the module where it could encounter strong magnetic fields from high current cabling connected to motors, solenoids, etc. Also avoid radio frequency energy from antenna's or inverters next to the module. Finally, avoid high voltage spikes in vehicle wiring by always using diode clamped relays when installing upfitter circuits.

#### B-BOM536-CC Module


Remove the lower dash panel below the steering column area and find a suitable location to mount the BOM536-CC module. Locate the module in an area away from any external heat sources (engine heat, heater ducts, etc.). Do not actually mount the module until all wire harnesses are routed and secure. The last step will be to mount the module.

# **BOM536-CC Module Mounting**

Ensure all harnesses are properly connected and routed, and are not hanging below the dash area. Mount the BOM536-CC module using screws or double sided tape. Reinstall the lower dash panel.

# **Gateway Plug and Play Harness (6-pin connector)**

- 1. Locate the vehicles Gateway Module (C2431). It will be mounted below the lower left dash panel.
- 2. Remove the harness behind the Gateway module by pressing the locking tab and pulling outward.
- 3. Plug the Female side of the InterMotive Gateway Harness into the back of the Gateway module. Ensure the connection is fully seated and secured by the locking tab.
- 4. Plug the Male side of the InterMotive Data Link Harness into Gateway harness.
- 5. Secure the BOM Gateway harness so that it does not hang below the lower dash panel.

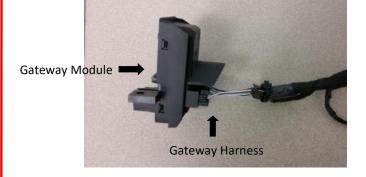



InterMotive Plug and Play Gateway Harness

# 4-Pin BOM LCO Connector Pin-Out Definition

Connector J5 contains the BOM536-CC (LCO) pins. Each output is rated at 1A.

The 4 LCO pins on connector J5 are defined as follows (supplied cable harness S-H130BX):

Phone: (530) 823-1048 Fax: (530) 823-1516

Page 2 of 13

- Pin #1 LCO 1, Purple Wire, Cargo Lamp Circuit (page 6).
- Pin #2 LCO 2, Pink Wire, Cluster Dimmer Down (page 10)
- Pin #3 LCO 3, Yellow Wire, Chime Mute Output (page 11)
- Pin #4 LCO 4, Tan Wire, Cluster Dimmer Up (page 10)



4 Pin Output

# **4-Pin BOM Relay Connector Pin-Out Definition**

Connector J8 contains the 4 BOM fused relay output pins. These 4 fused output pins are connected to 4 relay outputs. Each relay output is capable of 10A maximum.

The 4 fused relay output pins on connector J8 are defined as follows (supplied cable harness S-H117LX):

- Pin #1 Yellow/Gray, connect to BCM side of Center High Mounted Brake Lamp Circuit (page 6).
- Pin #2 Green/Brown, connect to BCM side of Reverse Lamp Circuit (page 5).
- Pin #3 Gray/Violet, connect to BCM side of Right Brake Lamp Circuit (page 7).
- Pin #4 Grey/Orange, connect to BCM side of Left Brake Lamp Circuit (page 7).

Pin # 1 2 3 4



4 Pin Output

# 16-Pin BOM Relay Connector

The 16 Pin Molex connector will be used to connect the harness side of the rear light circuits.

Pin #3 - Black, connect female bullet to male bullet from the included momentary switch (photo below).

Pin #9 - Orange, connect to harness side of Center High Mounted Brake Lamp Circuit (page 6).

Pin #11 - Green, connect to harness side of Reverse Lamp Circuit (page 5).

Pin #13 - Violet, connect to harness side of Right Brake Lamp Circuit (page 7).

Pin #15 - Gray, connect to harness side of Left Lamp Circuit (page 7).



16 Pin Molex

Phone: (530) 823-1048 Fax: (530) 823-1516 Page 3 of 13

# **4-Pin BOM Input Connector Definition**

Connector J4 contains the BOM's 4 discrete wire inputs. Two of these are active low (1 and 2). The active low inputs have their own internal pull up resistors so they can be left floating when not used or not active.

The 4 input pins on connector J4 are defined as follows:

- Pin #1 Blackout Input, Active low, Green/White Wire, Momentary low to activate Blackout Mode, connect the female bullet to the male bullet from the included momentary switch (photo below).
- Pin #2 Armed Input Active low, Violet Wire, Momentary low to activate DarkCar. Connect this wire to a momentary switch that will ground the input. (Optional)



# **Momentary Push Button (S-H84HX)**

A switch with LED is provided in the kit which is used for Black Out Input.

- 1. Drill a 16mm (0.630") hole in the desired mounting location.
- 2. Route the harness through the hole to mount the switch in the hole:
  - A. Remove lock nut from switch
  - B. Do not dis-assemble the switch to install
  - C. Pull the harness through the hole
- 3. Slide the lock nut onto the harness and snug it down onto the back of the switch.
- 4. Connect the bullet connectors to the mating bullet connectors from the BOM536 module.



InterMotive Inc. 12840 Earhart Ave Auburn, CA 95602 Phone: (530) 823-1048 Fax: (530) 823-1516 Page 4 of 13 www.intermotive.net products@intermotive.net BOM536-CC-032624-INS

#### **BCM Connections**

Locate the BCM near the passenger compartment. Locate the connector **C2280C** plugged into the BCM and disconnect it. Refer to page 9 for connector location. The supplied white 4-pin pigtails will be tapping into several of these wires.


Note: Performing one step at a time, these connections must be made using solder and the supplied heat shrink tubing. Cut the tubing to 1" lengths for this purpose.

# **Reverse Lamp Circuit**

The supplied male pigtail has Green/Brown wire and the female pigtail has the Green wire.

- 1. Locate Pin #11 Green/Brown wires of Connector C2280C.
- 2. Verify with a DVM that there is 12V on the Green/ Brown wires when the vehicle is in Reverse and OV when the vehicle is in any gear other than Reverse.
- 3. Cut the Green/Brown wire, pin #11 about 3 inches from the connector.
- 4. Attach the BCM side of the Green/Brown wire, pin 11 to the Green/Brown wire in the male pigtail.
- 5. Attach the harness side of the Green/Brown wire, pin 13 to the Green wire in the female pigtail.
- 6. Plug connector back into the BCM.

Continue to next page.

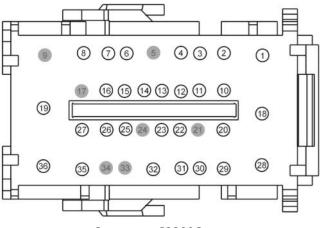

Connector C2280C

# **BCM Connections (cont.)**


Locate the **blue** connector **C2280E** plugged into the BCM and disconnect it. Note the pin numbers on the connector. Refer to page 9 for connector location. The supplied white 4-pin pigtails will be tapping into several of these wires.

Note: Performing one step at a time, these connections must be made using solder and the supplied heat shrink tubing. Cut the tubing to 1" lengths for this purpose.

# **Center High Mounted Brake Lamp Circuit**

The supplied male pigtail has Brown wire and the female pigtail has the Orange wire.

- 1. Locate Pin #13 Yellow/Gray wires of Connector C2280E. It will be a 18 gauge wire.
- 2. Verify with a DVM that there is 12V on the Brown wire when the Service Brake is pressed and 0V when the Service Brake is *not* pressed.
- 3. Cut the Yellow/Gray wire, pin #13 about 3 inches from the connector.
- 4. Attach the BCM side of the Yellow/Gray wire, pin 13 to the Yellow/Gray wire in the male pigtail.
- 5. Attach the harness side of the Yellow/Gray wire, pin 13 to the Orange wire in the female pigtail.

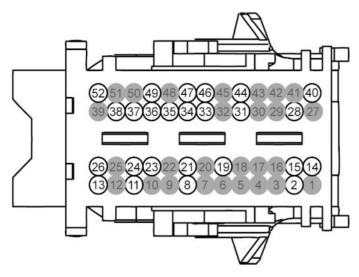

Connector C2280E

www.intermotive.net products@intermotive.net BOM536-CC-032624-INS


# **BCM Connections (cont.)**

1. Locate the **blue** connector **C2280E** plugged into the BCM and disconnect it. Note the Pin Numbers on the connector. The supplied white 4-pin pigtails will be tapping into several of these wires.

The supplied **male** pigtail has Green/Orange and Gray/Orange wires and the **female** pigtail has the Blue and Gray wires.

# **Right Brake Lamp Circuit**


- 1. Locate Pin #52 Gray/Violet wire on connector C2280E.
- Verify with a DVM that there is 12V on the Green/Orange wire when the Service Brake is depressed and 0V when the Service Brake is not depressed.
- 3. Cut the Gray/Violet wire, pin #52 about 3 inches from the connector.
- 4. Attach the BCM side of the Gray/Violet wire, pin #52 to the Gray/Violet wire in the male pigtail.
- 5. Attach the harness side of the Gray/Violet wire, pin #52 to the Violet wire in the **female** pigtail.

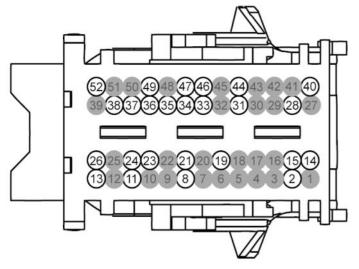

Connector C2280E

# **Left Brake Lamp Circuit**

- 1. Locate Pin #26 Gray/Orange wire on connector C2280E.
- 2. Verify with a DVM that there is 12V on the Grey/Orange wire when the Service Brake is depressed and 0V when the Service Brake is *not* depressed.
- 3. Cut the Grey/Orange wire, pin #26 about 3 inches from the connector.
- 4. Attach the BCM side of the Gray/Orange wire, pin 26 to the Gray/Orange wire in the male pigtail.
- 5. Attach the harness side of the Gray/Orange wire, pin 26 to the Gray wire in the female pigtail.

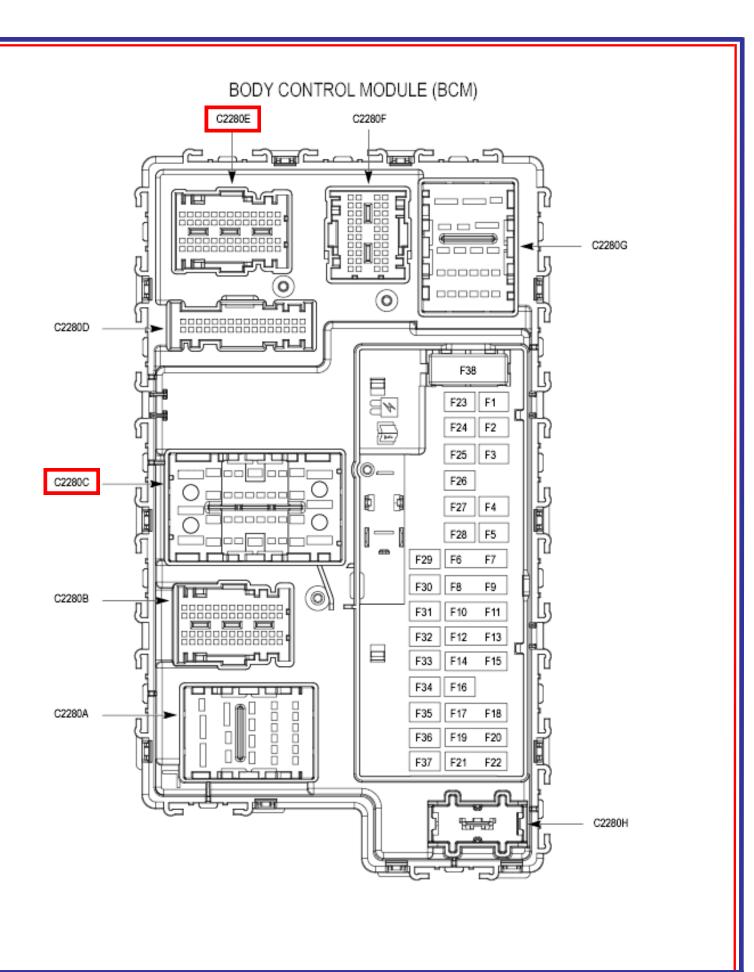

Phone: (530) 823-1048 Fax: (530) 823-1516 Page 8 of 13


#### **Cluster Control Installation Instructions**

When in Blackout mode the module will turn the cluster backlighting off. The following two connections must be made for this feature to function correctly.

Remove Headlamp switch from panel to get to connector C205.



Head Lamp Switch
Dim Down Circuit

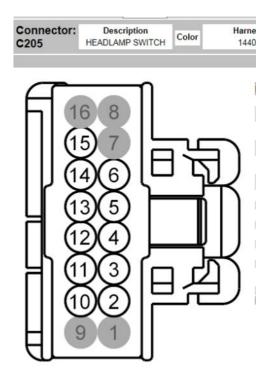

**Head Lamp Switch Connector** 

- 1. Locate Pin #3 (Brown/Violet wire) on C205.
- 2. Strip some of the insulator and momentarily ground the wire to verify the cluster brightness goes down.
- 3. Connect the circuit to the Pink Wire pin 2 of the 4 pin Molex connector.

# **Dim Up Circuit**

- 1. Locate Pin #6 (Yellow/Violet wire) on C205.
- 2. Strip some of the insulator and momentarily ground the wire to verify the cluster brightness goes up.
- 3. Connect the circuit to the Tan Wire pin 4 of the 4 pin Molex connector.



4 Pin Output

#### **Chime Mute Installation Instructions**


#### **Yellow Wire Connection**

The BOM536-CC kit provides a harness which consists of a white 4 pin connector with a Yellow wire.

Connect the yellow wire to the vehicle as follows:

Locate the BCM near the passenger compartment. Locate the **blue** connector **C2280E** plugged into the BCM and disconnect it. Note the Pin Numbers on the connector.

- 1. Locate Pin #33 Green/Violet Wire. It will be a 26 gauge wire.
- 2. Verify with a DVM that there is Ground signal on the Brown wire when the Driver Door is closed.
- 3. Verify Ground signal goes away when Driver Door is open.
- 4. Strip a small amount of wire insulation from the Green/Violet wire (do not cut wire) and attach the Yellow wire using solder and tape.

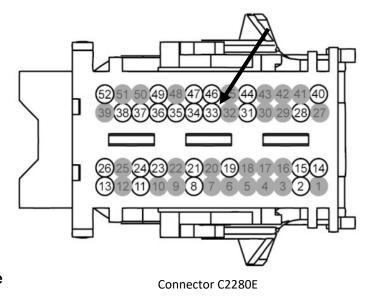

#### **Chimes Mute Post Installation Test**

With vehicle in Park and the Park Brake applied:

- 1. Turn Key to Run (do not start engine) and plug the 6 pin Data Link connector into the BOM536-CC module. This allows the BOM536-CC to read the vehicles VIN to verify which vehicle it is plugged into.
- Verify that the LED's on the module are not scrolling (meaning it has successfully acquired and recognizes the VIN).
- 3. Verify the following chimes no longer sound:
- Door Ajar Warning Chime Key in Run (engine on or off), Trans in Park, Door ajar
- Key-in-Ignition Warning Chime Key in ignition (Off or ACC), door ajar
- Headlamps On Warning Chime Key removed, Headlights on, door ajar
- Safety Belt Warning Chime Key switched to Run, driver seatbelt unbuckled. Note: this last chime may sound occasionally due to the electrical architecture of the vehicle. This is normal behavior and cannot be avoided.

# **Post Installation / Check List**

The following checks must be made after installation of the system, to ensure correct and safe operation. If any of the checks do not pass, do not deliver the vehicle. Recheck all connections per the installation instructions.

- 1. Turn ignition key on (to "Run").
- 2. Apply the Parking Brake and Turn Off all lights (High Beams, Low Beams, and Parking Lights).
- 3. Arm vehicle (if necessary).
- 4. Press the momentary switch.
- 5. Verify Instrument Cluster turns OFF.
- 6. Hold Service Brake and verify the Brake lights are disabled.
- 7. Turn on Low Beams, this will disable Blackout.
- 8. Hold Service Brake and verify the Brake Lights are lit.
- 9. Verify Instrument Cluster backlighting comes on.
- 10. Turn Off all lights (High Beams, Low Beams, and Parking Lights).
- 11. Press the momentary switch.
- 12. Place transmission in Reverse and verify the reverse lights are not lit.
- 13. Turn on Low Beams.
- 14. Verify that the Reverse Lights are On.

#### DO NOT PUT VEHICLE IN SERVICE IF IT DOES NOT PASS ALL OF THE ABOVE TESTS

#### Contact InterMotive at 530-823-1048 for technical assistance

# **Diagnostics**

Diagnostic mode is entered by pressing the test button on the module. The module provides diagnostic LEDs which illuminate according to the following table. There are multiple pages of diagnostics and the page can be determined by the Status LED. Pressing the test button will cycle through the different pages.

STATUS LED	1-1	2-2	3-3
LED 1	Chimes Enabled	Black Out Active	High Beams
LED 2	Dark Car Control	Armed Enabled	Speed override
LED 3	Not Used	VSS < Max speed	Internal Use
LED 4	Not Used	Headlamp Switch OFF	Internal Use



InterMotive Inc. 12840 Earhart Ave Auburn, CA 95602 Phone: (530) 823-1048 Fax: (530) 823-1516 Page 11 of 13

www.intermotive.net products@intermotive.net BOM536-CC-032624-INS

#### **Blackout Operating Instructions**

# **System Operation**

The B-BOM536-CC module has the ability to eliminate all exterior lighting (except DRL's if activated) to aid in covert operations. When activated, with the headlights turned off, the B-BOM536 will eliminate the reverse lights and the Service Brake lights.

#### **ARMED Input**

The ARMED Input is used only if the vehicle has Dark Car disabled. These are not ideal conditions for the vehicle to be "Blacked Out" so the ARMED Input will enable Dark Car. If the Input is not "Armed", the module will not enter Black-Out Mode.

Note: The input is not used if vehicle has Dark Car enabled.

#### **Black Out Preconditions:**

- Parking lights must be OFF.
- Headlights must be OFF.
- Vehicle speed must be less than exit speed. (configurable)
- Vehicle Armed input enabled (if used).
- · Press the momentary switch.

Once in Black Out mode, the stop lamps and reverse lamps are inactive. The module will also dim the instrument panel cluster to its lowest level.

# To disable Black Out, apply one of the following:


- Press the momentary switch.
- Turn ON parking lights.
- Turn ON Headlights.
- Vehicle speed goes over exit speed.

To bypass the "exit speed", hold the Black Out input while driving and the module will keep the tail lights inactive.

#### **Speed Override**

The configurable Exit Speed is used for safety purposes and the speed can be set between 5-20 MPH. To bypass the Exit Speed, enter Black Out Mode by momentarily applying the Black Out Input. Once entered, hold the momentary switch and the module will keep the lights disabled at any speed as long as the input is continuously pressed.

U.S. Patent #9,469,261

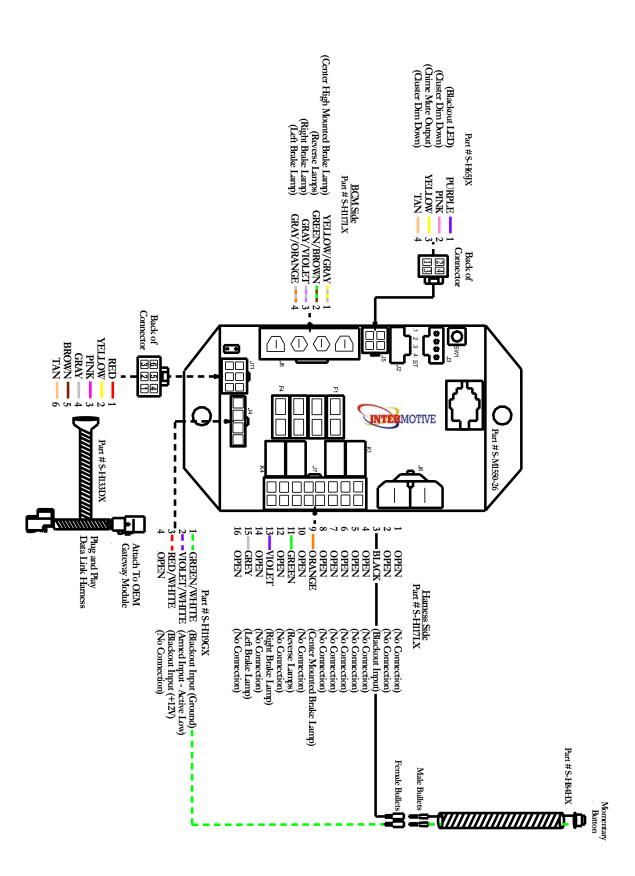

# Submit product registration at www.intermotive.net

If the BOM536-CC fails any step in the Post Installation Test, review the installation instructions and check all connections. If necessary, call InterMotive Technical Support at (530) 823-1048

BOM536-CC-032624-INS Page 13 of 13