
Break Out Box (BOBe) Visual Instructions



(530) 823-1048

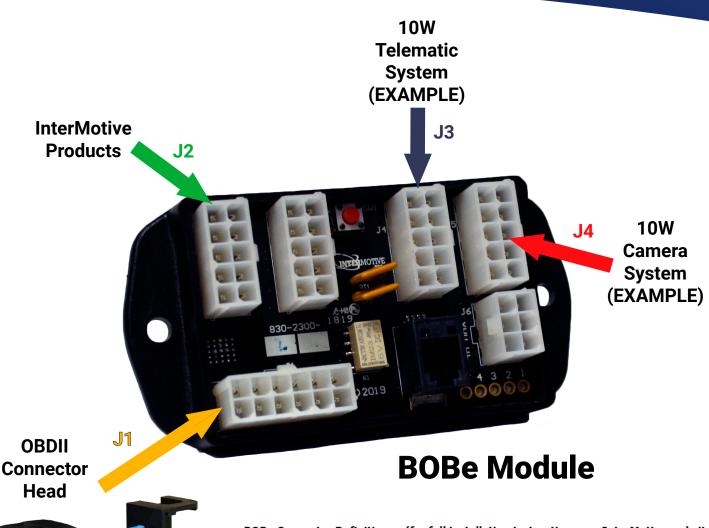

BOBe Connector Definition — (for full installation instructions see InterMotive website)

Connection point between the vehicle and the module.

Data Port for other InterMotive modules J4 & J5 (Same as J2&J3 on standard BOB)

Data Port for other InterMotive modules and 3rd Party modules. The power and ground is protected by a 4 AMP

OBDII port for 3rd Party modules. The power and ground is protected by a 4 AMP resettable fuse.

Communication port.

