

Break Out Box (BOBe)

Visual Instructions

10W
Telematic
System
(EXAMPLE)

InterMotive
Products

J2

J4

J5

10W
Camera
System
(EXAMPLE)

OBDII
Connector
Head

J1

BOBe Module



BOBe Connector Definition — (for full installation instructions see InterMotive website)

J1

- Connection point between the vehicle and the module.

J2 & J3

- Data Port for other InterMotive modules.

J4 & J5 (Same as J2&J3 on standard BOB)

- Data Port for other InterMotive modules and 3rd Party modules. The power and ground is protected by a 4 AMP resettable fuse.

J6

- OBDII port for 3rd Party modules. The power and ground is protected by a 4 AMP resettable fuse.

J7


- Communication port.

InterMotive Products connect here

J2 & J3
Pass Through Data

J4 & J5
Protected
Pass Through Data

3rd Party Devices connect here

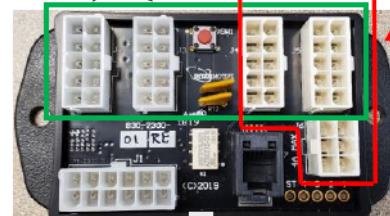

J1
Data Link connector

J7
COMM Port