

**Crank Disable /
Crank Enable**

INTERMOTIVE
**VEHICLE
CONTROLS**

An ISO 9001:2015 Registered Company

Crank Disable / Crank Enable

Ensures Engine Start-up in Safe Conditions

Overview

- Crank Disable prevents start-up if certain customizable safety conditions are not met
- Crank Enable ensures the engine will only start if certain customizable safety conditions are met
- Inexpensive safety enhancement, required by some states
- Compact unit is easy to install

Features

- Safety conditions include: lift door open or closed, shifter in or not in Park, emergency exit locked or open, and more
- Works in conjunction with InterMotive's Intelligent Lift Interlock System™ to prevent vehicle movement while lift/ramp is in use
- Includes Intermittent Fault Filter™ (IFF) technology to eliminate false readings

Proudly distributed by
LGS GROUP
AUTOMOTIVE TECHNOLOGIES

(775) 831-2002
www.InterMotive.net

REV_AA

