

FlexSpeak™

Voice Annunciator System



Overview

- Automated system for configurable audio messages
- Utilizes vehicle CAN data to trigger messages based on inputs when integrated with the InterMotive FlexTech™ control system
- Available in multiple languages
- Simple plug and play connections

Features

- Configurable setup through the module for driver-focused messages
- Connect to the vehicle's public address (PA) speaker system to allow for passenger or external announcements
- Choose from a list of standard messages or record custom messages
- FlexTech™ integration provides a broad range of vehicle data for message triggers including speed, doors, lights, brakes, locks and more
- Offers the flexibility of eight discrete input triggers for non-FlexTech™ applications



Proudly distributed by

LGS GROUP
AUTOMOTIVE TECHNOLOGIES

775-831-2002 | www.InterMotive.net



Watch FlexSpeak™
in action

Driver Alert Messages

- "Warning: Excessive speed"
- "Warning: Low fuel"
- "Warning: Engine is overheating"
- "Warning: Park brake on"
- "Rear door open"
- "Entry door open"

Passenger Announcement Messages

- "Welcome to [company name]"
- "Stop requested"
- "Caution: Vehicle is stopping"
- "Caution: Doors are opening"
- "Caution: Vehicle is preparing to move"
- "Watch your step"
- "Please sit down"

Emergency Response Messages

- "Stand back from the vehicle"
- "K9 officer about to be released"

Work Truck Messages

- "Caution: Bucket in use"
- "Caution: Construction zone"

