

Upfitter Interface Module® + G-AIM517-B (2022 Ford Transit*)



* For vehicles with the Gateway connector located behind the glovebox (White OBDII connector). For vehicles with the Gateway located below the lower left dash panel (with a Black OBDII connector), use the B-AIM517-B.

Introduction

The G-AIM517-B provides two major functions to facilitate the production of emergency vehicles. A fast idle feature that triggers from a number of configurable sources including battery voltage, parking brake and a discrete input. It provides 8 outputs which can be configured to turn on in response to a variety of vehicle data. These outputs are used to drive various external loads. An optional interlock add-on is available (G-AIM517-B-S). It provides a vehicle interlock that prevents the driver from shifting out of Park if certain conditions are not met.

Disconnect the battery before proceeding with the installation.



WARNING
Disconnect the battery to
prevent setting a check engine
light.

CAUTION

All electronic products are susceptible to damage from Electrostatic Discharge or ESD. Ground yourself before handling or working with the module and harnessing by first touching chassis ground, such as the barrel of the cigarette lighter.



It is the installer's responsibility to route and secure all wiring harnesses where they cannot be damaged by sharp objects, mechanical moving parts and high heat sources. Failure to do so could result in damage to the system or vehicle and create possible safety concerns for the operator and passengers.

It is important to avoid placing the module where it could encounter strong magnetic fields from high current cabling connected to motors, solenoids, etc. Also avoid radio frequency energy from antenna's or inverters next to the module. Finally, avoid high voltage spikes in vehicle wiring by always using diode clamped relays when installing upfitter circuits.

Installation Instructions


G-AIM517-B Module

Remove the lower dash panel below the steering column and find a suitable location to mount the G-AIM517-B module. Do not mount the module where it will be exposed to excessive heat. Do not mount the module until all wire harnesses are routed and secure. The last step of the installation is to mount the module.

Installation Instructions (continued)

Gateway Plug and Play Harness (6-pin connector)

1. Locate the vehicles Gateway Module. It will be mounted behind the glove compartment.
2. Press the tabs inward on the sides of the glove compartment and fully lower it.
3. Remove the 3 nuts securing the Gateway module to the vehicle.
4. Remove the 26-pin connector from the side of the Gateway module and plug into the mating connector on the G-AIM517 harness.
5. Plug the male 26-pin connector from the G-AIM517 harness into the Gateway module.
6. Reinstall the Gateway module and the glove compartment.
7. Plug the free end of the Data Link harness into the mating 6-pin connector on the G-AIM517 module.

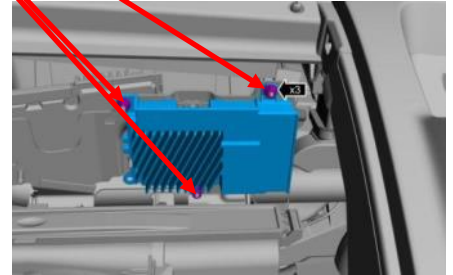

Fast Idle

The fast idle system controls engine idle RPM in response to a number of triggers in order to increase electrical and mechanical output of the vehicle. By default, gas engines idle at 1500 RPM while diesel engines idle at 1200 RPM.

Fast Idle Engage Input (4-Pin Connector)

Attach the G-AIM517-B Harness connector Pin #1 Green/White wire on the 4 pin connector to any equipment that provides a ground signal when the fast idle needs to be engaged. (PTO, pump, etc....)

| Fast Idle Triggers | | |
|----------------------------|---------------------------------------|---|
| Trigger Name | Trigger Conditions | Disable Conditions |
| Manual Engage Input | Fast Idle Engage Input wire activated | Fast Idle Engage Input wires not active |
| VBAT Low (if enabled) | VBAT < 12.5V (default) | VBAT > 13.5V for > 5 minutes (default) |
| Parking Brake (if enabled) | Parking Brake applied | Parking Brake Released |

Fast Idle Preconditions

The following preconditions must be met prior to initiating Fast Idle operation:

- Vehicle speed zero
- Transmission in Park
- Accelerator pedal not applied
- Engine Coolant temperature less than 230°F
- Engine RPM must be greater than 200 and less than 2800
- Service Brake not applied
- Parking Brake must be applied if this feature is enabled

Pin Mode— AIM Application

Outputs can be configured from the factory for various modes, as described below. Momentary mode is the most commonly used, where an output is 'active' only when the proper conditions have been met.

Momentary: Output follows condition set but with a turn on delay, and a turn off delay. Setting 'On Delay' and 'Off Delay' to zero causes the output pin to simply "follow" the condition set being true (ON) and false (OFF).

| | | | | | |
|----------|-----------|---------------|---|--------------|---|
| Pin Mode | Momentary | Off Delay (s) | 0 | On Delay (s) | 0 |
|----------|-----------|---------------|---|--------------|---|

Latching: This mode will latch an output pin ON, starting 'On Delay' seconds after the conditions are met, and will keep it ON even after the conditions are no longer true. It will then latch the output OFF, following 'Off Delay' seconds after the conditions are met again. Think of it as toggle on—toggle off. The simplest use would be when using a momentary button as the only input condition and setting the Delays to zero. Thus a load could be turned on by pushing a momentary button, and turned back off by pushing the button a second time.

| | | | | | |
|----------|----------|---------------|---|--------------|---|
| Pin Mode | Latching | Off Delay (s) | 0 | On Delay (s) | 0 |
|----------|----------|---------------|---|--------------|---|

Time Hold: The output pin goes ON after the conditions become true, and stays ON for the selected 'On Time', regardless of the conditions. Off Time is Not Applicable.

| | | | | | |
|----------|-----------|--------------|--|-------------|---|
| Pin Mode | Time Hold | Off Time (s) | | On Time (s) | 0 |
|----------|-----------|--------------|--|-------------|---|

Time Delay: Output is turned ON after the selected 'delay' time after the conditions are met. It stays on for selected 'On time', regardless of input conditions.

| | | | | | |
|----------|------------|-----------|---|-------------|---|
| Pin Mode | Time Delay | Delay (s) | 0 | On Time (s) | 0 |
|----------|------------|-----------|---|-------------|---|

Flashing—Momentary: Used for creating a flashing output. When conditions are met, output flashes. When conditions are no longer met, flashing stops. Flashing ON and OFF times (duty cycle) are controlled by entering the following values.

| | | | | | |
|----------|----------------------|----------------|---|---------------|---|
| Pin Mode | Flashing - Momentary | Off Time (.1s) | 0 | On Time (.1s) | 0 |
|----------|----------------------|----------------|---|---------------|---|

Flashing - Latching: Same as above, except flashing will continue after conditions are no longer true, and will stop when conditions become true again—toggle ON, toggle OFF. Duty cycle is controlled by the ON and OFF times.

| | | | | | |
|----------|---------------------|----------------|---|---------------|---|
| Pin Mode | Flashing - Latching | Off Time (.1s) | 0 | On Time (.1s) | 0 |
|----------|---------------------|----------------|---|---------------|---|



G-AIM517-B Output pin-out definition

Outputs 2 through 8 are configurable by Intermotive as either active high (12V) or active low (ground). Each of these outputs are rated at 1/2A and are intended to drive relay coils or other low current loads. Output 1 is a high current (8A max.) output and should be fused. The output sense for Output 1 (Pin #2 Purple wire on the 4 pin connector) depends on the input at Pin #4 (Tan wire) on the 4 pin connector (i.e., 12V on Pin #4 will output 12V on Pin #2 when Output 1 is active).

The 8 outputs are defined as follows:

- Pin #1 N/C
- Pin #2 (Green wire) Output 2
- Pin #3 (White wire) Output 3
- Pin #4 (Gray wire) Output 4
- Pin #5 N/C
- Pin #6 N/C
- Pin #7 N/C
- Pin #8 (Brown wire) Output 5
- Pin #9 (Orange wire) Output 6
- Pin #10 (Blue wire) Output 7
- Pin #11 (Yellow wire) Output 8
- Pin #12 N/C

- Pin #1 (Green/White Wire) General Purpose Input 1
- Pin #2 (Purple) Output 1
- Pin #3 (Pink) General Purpose Input 2 (Optional)
- Pin #4 (Tan wire) Output 1 Source

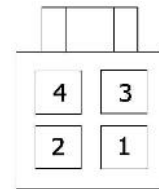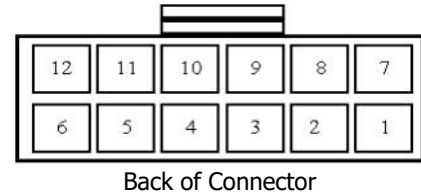

Connect the desired outputs to vehicle equipment as needed. Tape up unused leads. When connecting to relays, use relays with appropriate kick-back suppression, such as Digikey #PB682-ND. Unsuppressed relays will induce very high voltage spikes throughout modern vehicle's sensitive computer electronics and should not be used, per Ford, GM, SAE, etc.

By default, all outputs are active low and configured as follows:

- Output #1 (Purple wire) Engine Cranking
- Output #2 (Green wire) Aux Door Lock
- Output #3 (White wire) Aux Door Unlock
- Output #4 (Gray wire) TR = Reverse
- Output #5 (Brown wire) Ignition On
- Output #6 (Orange wire) Engine Running
- Output #7 (Blue wire) Right Turn Signal On
- Output #8 (Yellow wire) Left Turn Signal On

Door Unlock

Locate BCM connector C2280C under the steering column and tap into Pin56 (Violet/Grey) wire. Momentarily (greater than half a second) applying a ground signal to that wire causes all doors to Unlock.

Non-OEM Switch Lock/Unlock (Key in or out of Ignition)

The G-AIM517-B can lock/unlock non-OEM switches (doors, cabinets, etc.) using the OEM key fob. Depending on the configuration, the lock and unlock outputs will be configured to 2 of the 8 outputs on the 12-pin connector. Each output is rated at 1/2A and is intended to drive relay coils or other low current loads. When the key is in or out of the ignition, press the OEM key fob lock or unlock button 2 times to lock or unlock the non-OEM switches.

Aux Door Lock and Unlock

Output #2 and #3 are configured (default) to control lock and unlock function for an auxiliary door. The outputs will pulse for one second when a key fob or lock/unlock button is pressed. The auxiliary door will also lock when speed first goes above 12mph after a key cycle.

Optional Interlock (G-AIM517-B-S)

To prevent the vehicle from shifting out of Park in certain scenarios, G-AIM517-B-S can lock the shifter on command.

Shift Lock Connection

There are multiple cup holder options for the Ford Transit. Please follow the appropriate instructions.

Option 1

- Remove the cup holder.



- Locate connector 2810 (12-pin connector). Remove the OEM connector and plug it into the mating 12-pin connector T-harness supplied with the G-AIM517-B-S. Plug the remaining male connector into the OEM cavity.



Interlock (Continued)

- Plug the 6 pin connector into the mating cavity on the SL board. Attach the Yellow wire from pin-5 on the 6 pin connector to the configured wire on the 12 pin connector (+12V output) of the G-AIM517-B-S using solder and heat shrink.



SL Board


Option 2

- Remove the under dash panel by firmly grasping it and pulling it towards the rear of the vehicle.



Interlock (Continued)

- Remove the two screws as seen in the photo.

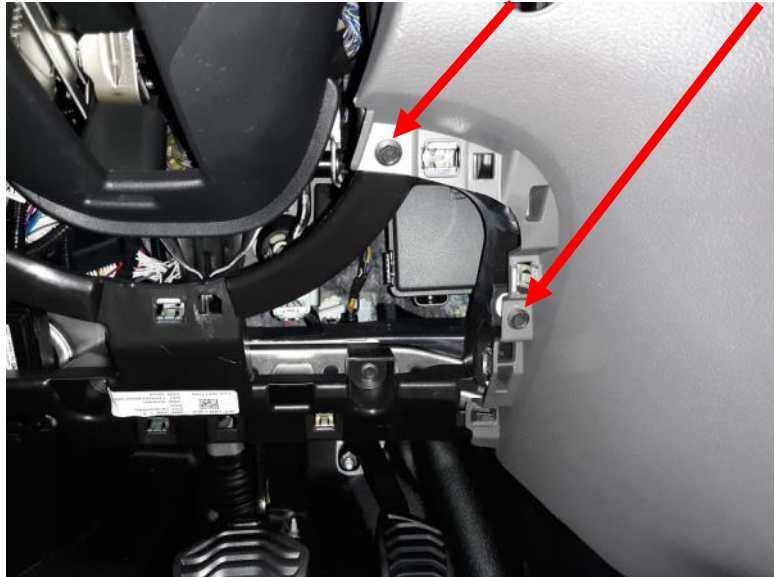

- Remove the trim panel on the passengers side (see photo) by using a plastic trim removal tool.



Interlock (Continued)

- Open the glove box and remove the screw as shown in the photo.



- Remove the gear shifter trim panel using a plastic trim removal tool.



Interlock (Continued)

- Remove the small trim piece shown in photo.



- Remove the center under dash panel by firmly grasping it and pulling it towards the rear of the vehicle.



Interlock (Continued)

- Locate connector 2810 (12-pin connector). Remove the OEM connector and plug it into the mating 12-pin connector T-harness supplied with the G-AIM517-B-S. Plug the remaining male connector into the OEM cavity.



- Plug the 6 pin connector into the mating cavity on the SL board. Attach the Yellow wire from pin-5 on the 6 pin connector to the configured wire (+12V output) on the 12 pin connector of the G-AIM517-B-S using solder and heat shrink.



SL Board

Reconnect the vehicle battery

During VIN acquisition: Scrolling LED's between LED1 and LED5 indicate an error occurred while acquiring the VIN.

Verify that the chassis is supported by this product. If work was recently performed on this chassis, the VIN may have been cleared in the PCM.

A lit LED between LED 1 and LED 5 will indicate the following:

| | |
|-------|--------------------|
| LED 1 | Manufacturer Error |
| LED2 | Model Error |
| LED3 | Engine Error |
| LED4 | Model Year Error |
| LED5 | VIN Error |

Post Installation System Operation Test

Perform the following tests before actually mounting the module, to allow easy viewing of the diagnostic LED's, if needed.

1. Place transmission in Park and start the engine. **Note:** Vehicle may enter Fast Idle if VBAT is low. Either wait to see if the battery charges and Fast Idle stops, or place a charger on the vehicle to disable the VBAT low trigger to allow testing of other triggers.
2. Manually engage the Fast Idle Input by having aftermarket vehicle equipment ground the Input wire. Engine speed will increase to the set RPM level. If this does not occur, check harness connections. Also see diagnostics below.
3. When Fast Idle is engaged, keep the Input wire grounded, and depress the Service Brake for 1 second. Fast idle will temporarily disengage anytime the Service Brake is pressed, and will automatically reengage after approximately 2 seconds once the Brake pedal is released.
4. Place transmission shift lever in the "Neutral" position. (Input wire still grounded). Verify the vehicle does not go into Fast Idle.
5. Verify outputs 1-8 are working correctly.

If the G-AIM517-B fails any of the above tests, check harnesses and review instructions, or check diagnostics below. If necessary, call InterMotive Technical Support at (530) 823-1048.

Post Installation System Operation Test (continued)



Diagnostics

Diagnostic mode is entered by momentarily grounding the mounting pad labeled "Test" on the module. This can be done with a simple jumper wire by holding one end to chassis ground, while touching the other end to the "Test" pad. The module provides diagnostic LEDs which illuminate according to the following table. To exit this mode simply cycle the key or momentarily ground the "Test" pad again.

Fast Idle Status Codes

Status Codes provide the current status of the Fast Idle system. The on-board "Status" LED will flash a 2-digit code as shown in the table. The first digit will flash, wait one second, flash the second digit, then wait four seconds before the next code. The Status Codes continue to flash until the module is reset (cycle key), or the test input is momentarily grounded again.

| LED # | Diagnostic Mode LED Descriptions |
|--------|--|
| 1 | Output 1 is On |
| 2 | Output 2 is On |
| 3 | Output 3 is On |
| 4 | Output 4 is On |
| 5 | Output 5 is On |
| 6 | Output 6 is On |
| 7 | Output 7 is On |
| 8 | Output 8 is On |
| 9 | Fast Idle Input Active |
| 10 | Door Unlock Input Active |
| STATUS | Continuously flashes two digit status codes. See Status Code table |

| AFIS Status Codes | |
|-------------------|-----------------------|
| Status Code | Description |
| 1-1 | Ready for fast idle |
| 2-4 | VBAT Trigger |
| 2-8 | Engage Input Trigger |
| 2-9 | Parking Brake Trigger |
| 3-1 | RPM > 2800 |
| 3-2 | RPM < 200 |
| 3-3 | TR not = to PARK |
| 3-4 | VSS not = to 0 MPH |
| 3-5 | Service Brake applied |
| 3-6 | TFT > 250°F |
| 3-7 | Need to Apply PB |
| 3-8 | ECT > 250°F |
| 3-9 | AAT < 70°F |

G-AIM517-B Module Mounting

Ensure all harness are properly connected and routed, and are not hanging below the dash area. Mount the G-AIM517-B module using screws or double sided tape. Reinstall the lower dash panel.

LEAVE IN VEHICLE Operating Instructions - Upfitter Interface Module® + G-AIM517-B (2022 Ford Transit*)

*** For vehicles with the Gateway connector located behind the glovebox (White OBDII connector). For vehicles with the Gateway located below the lower left dash panel (with a Black OBDII connector), use the B-AIM517-B.**

System Operation

The G-AIM517-B provides two major functions to facilitate the production of emergency vehicles. It provides a fast idle feature that triggers from a number of configurable sources including battery voltage, parking brake and a discrete input. It provides 8 outputs which can be configured to turn on in response to a variety of vehicle data. These outputs are used to drive various external loads.

Fast Idle

The fast idle system controls engine idle RPM in response to a number of triggers in order to increase electrical and mechanical output of the vehicle. By default, gas engines idle at 1500 RPM while diesel engines idle at 1200 RPM.

| Fast Idle Triggers | | |
|----------------------------|---------------------------------------|---|
| Trigger Name | Trigger Conditions | Disable Conditions |
| Manual Engage Input #1 | Fast Idle Engage Input wire activated | Fast Idle Engage Input wires not active |
| VBAT Low (if enabled) | VBAT < 12.5V (default) | VBAT > 13.5V for > 5 minutes (default) |
| Parking Brake (if enabled) | Parking Brake applied | Parking Brake Released |

Fast Idle Preconditions

The following preconditions must be met prior to initiating Fast Idle operation:

- Vehicle speed zero
- Transmission in Park
- Accelerator pedal must not be applied
- Engine Coolant temperature less than 230°F
- Engine RPM must be greater than 200 and less than 2800
- Service Brake not applied
- Parking Brake must be applied if this feature is enabled

Operating Instructions (continued)

Door Unlock

 


Locate BCM connector C2280C under the steering column and tap into Pin56 (Violet/Grey) wire. Momentarily (greater than half a second) applying a ground signal to that wire causes all doors to Unlock.

Non-OEM Switch Lock/Unlock (Key in or out of Ignition)


The G-AIM517-B can lock/unlock non-OEM switches (doors, cabinets, etc.) using the OEM key fob. When the key is in or out of the ignition, press the OEM key fob lock or unlock button 2 times to lock or unlock the non-OEM switches.

Interlock (optional)

To prevent the vehicle from shifting out of park in certain scenarios, the AIM517 can lock the shifter on command. This feature is optional and must be enabled to function.

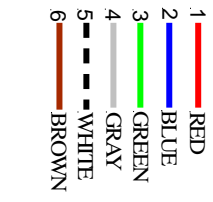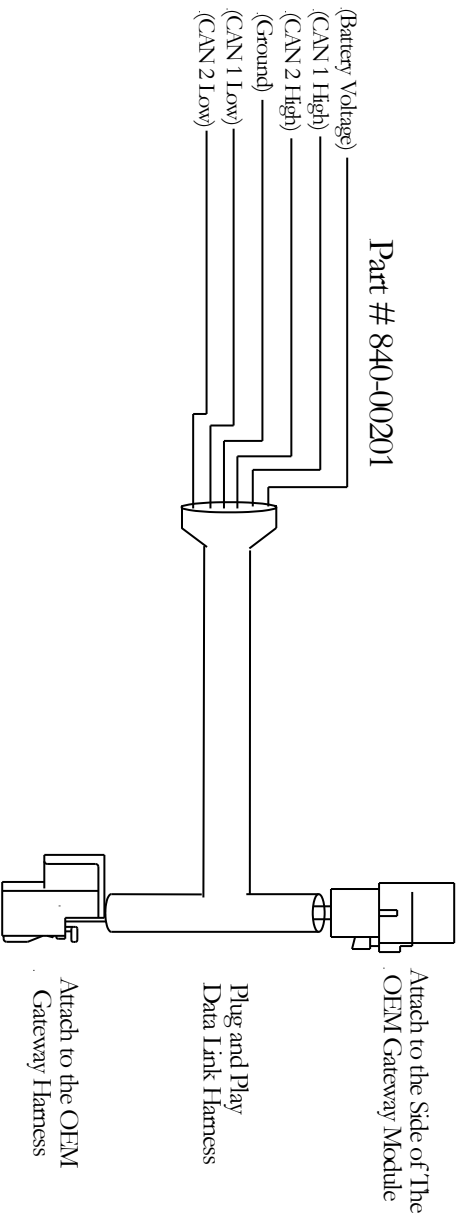


Part # 840-00201


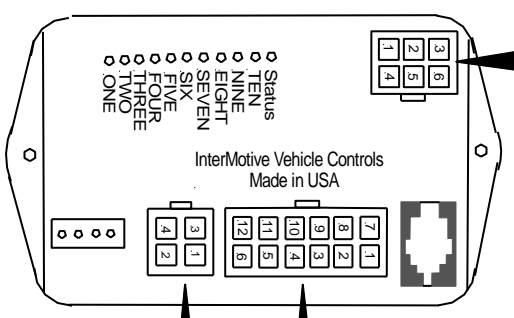


G-AIM517-B
Part # S-M1211-164

Part # S-H64FX

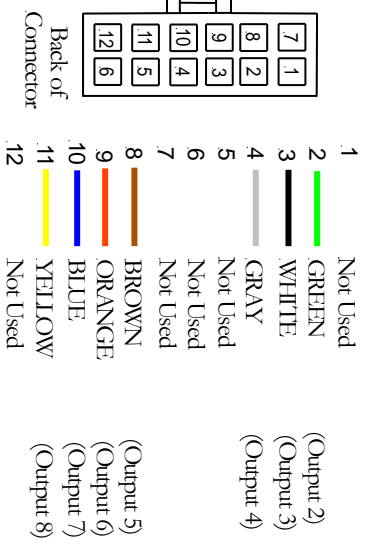

Part # S-H65BX

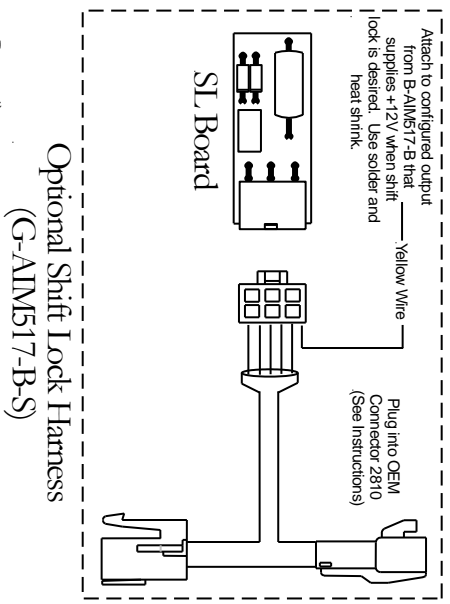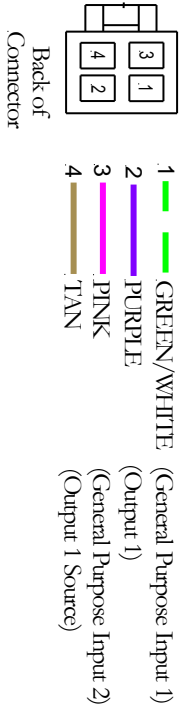

Submit product registration at www.intermotive.net

If the G-AIM517-B fails any step in the Post Installation Test, review the installation instructions and the loaded configuration by running the Graphical User Interface application. If necessary, call Intermotive technical support at (530) 823-1048.