


# IdleLock™ with AutoSense™ Technology

## Automatic Secured Idling

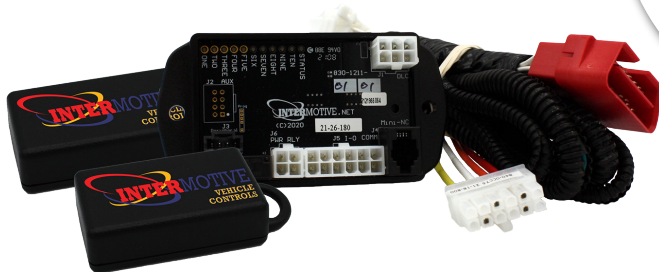

### Overview

- This theft prevention system is automatically activated when the driver exits the vehicle with an InterMotive or OEM fob
- Transmission is locked in Park while the engine idles, providing power to equipment
- Key is locked in the ignition cylinder for added security\*
- System is automatically disabled when the driver re-enters the vehicle with the fob

### Features

- All lights, equipment and HVAC are still fully functional while the system is engaged
- An output is also provided to allow for disabling auxiliary equipment or to lock 10 seconds after the fob leaves the vehicle
- If an attempt is made to move the vehicle without the fob detected, the horn will sound


*\*Stellantis vehicles may require a Stellantis remote start antenna.*

Proudly distributed by  
**LGS GROUP**  
AUTOMOTIVE TECHNOLOGIES

775-831-2002 | [www.InterMotive.net](http://www.InterMotive.net)

## Specifications

### EXAMPLE SCHEMATIC

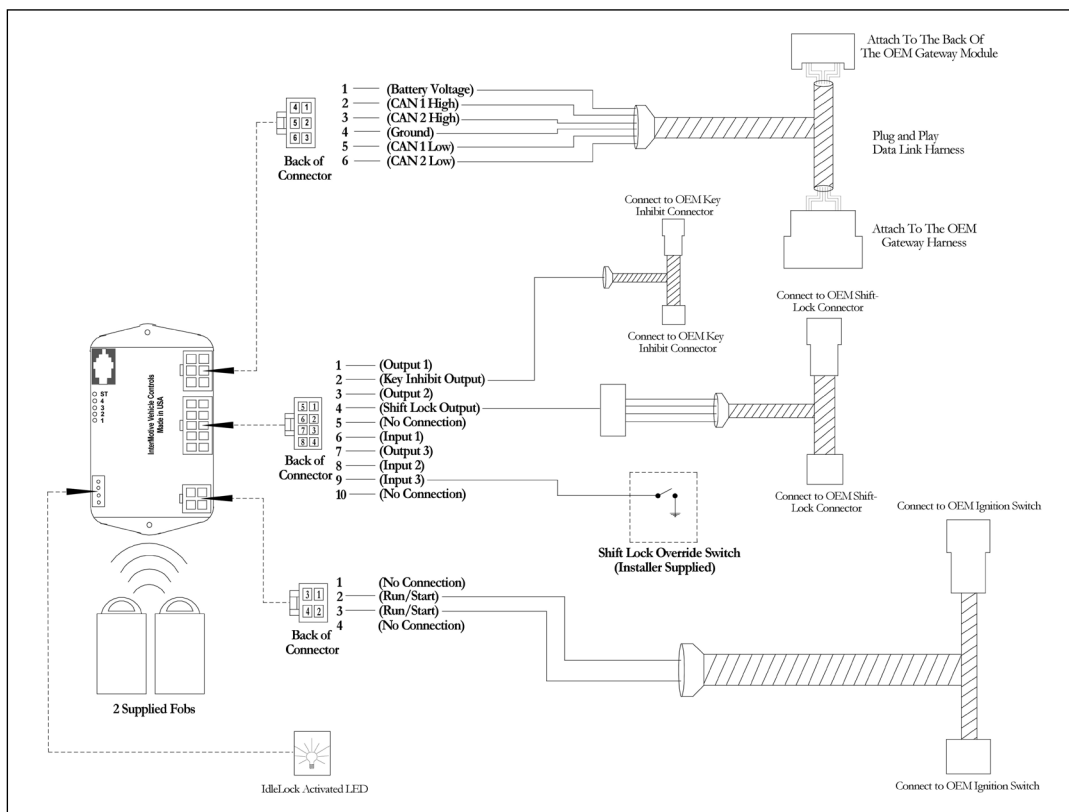

### SPECIFICATIONS

Number of Inputs	Three active inputs (one high, two low)
Number of Outputs	Three active outputs (two high, one low)
Current Draw	120 mA
Quiescent Draw	<2 mA (sleep current)
Temperature Range	-40°C to 80°C
Dimensions	3"L x 2"W x 1"H