

# Tera Term

A special Serial Communication Cable is available from Intermotive to use this method. You will be required to download and install the proper USB driver the first time you use this cable. All driver files are located online at: <http://www.intermotive.net>

- Find the correct drivers for your system and follow the steps to download the latest version (located under the "Driver Version" heading). If unsure about the installation process, contact InterMotive for assistance.
- Download and install the latest release of the Tera Term application from: <http://www.intermotive.net>
- Plug one end of the cable into your PC's USB port, and with the vehicle's key in the off position, plug the other end into the module's COM port.
- Open the Tera Term application. The Tera Term 'New Connection' window will open (see picture).
- Click the 'Serial' button and choose the COM Port that the Intermotive Download Cable is connected to (typically the highest numbered COM Port). Click 'OK'.
- Under the 'Setup' tab, choose 'Serial Port'.
- In the next window, you will need to change several of the default parameters for the Port Settings as follows:
  - Baud rate: 57600
  - Data: 8 bits
  - Parity: None
  - Flow Control: None
  - Transmit delay: 0 msec/char, 0 msec/line
  - Click 'OK'.
- Tera Term setup is now complete.

