

Crank Disable / Crank Enable

Ensures Engine Start-up in Safe Conditions



Overview

- Crank Disable prevents start-up if certain customizable safety conditions are not met
- Crank Enable ensures the engine will only start if certain customizable safety conditions are met
- Inexpensive safety enhancement, required by some states

Features

- Safety condition examples: lift door open or closed, shifter in or not in Park, emergency exit locked or open, and more
- Works in conjunction with InterMotive's Intelligent Lift Interlock System™ to prevent vehicle movement while lift/ramp is in use
- Includes Intermittent Fault Filter™ (IFF) technology to eliminate false readings
- Compact unit is easy to install

Product features may vary by make, model or year. See instructions for complete details.

Proudly distributed by
LGS GROUP
AUTOMOTIVE TECHNOLOGIES 

775-831-2002 | www.InterMotive.net