

**Speed Sentinel™ G-SS502-D, G-SS502-DX**  
**2021 Ford F150**  
**2023 Ford F250-F600 Series**

Contact InterMotive for specific engine applications.



## System Overview

Speed Sentinel is a programmable road speed limiter for Ford vehicles. Speed Sentinel is a micro-processor controlled unit that limits maximum vehicle speed but does not limit maximum engine output.

Speed Sentinel interfaces with the vehicle through the use of "Plug & Play" connectors that plug directly into the vehicle's factory OEM connectors. This method of installation reduces the installation time and improves the connection reliability.

Speed Sentinel has been designed with internal safeguards to insure the safe operation of the vehicle. If it senses any unsafe or unknown condition it automatically reverts back to full driver control.

Speed Sentinel can be set up for either single or dual speed operation.

Optional Switch Controlled setting, preprogrammed by InterMotive, includes Optional Forced Engine Idle Functions—flip an operator installed switch and Speed Sentinel forces the engine to stay in idle mode as a theft deterrent.

Optional System Controlled Electronic Override of Speed Sentinel is available for Emergency vehicles when in Code 3 mode.

For activation and installation instructions of the optional modes, contact InterMotive.

**NOTE:** Speed Sentinel is unable to cancel cruise control on 2023 F250-F600.

### **IMPORTANT—READ BEFORE INSTALLATION**

It is the installer's responsibility to route and secure all wiring harnesses where they cannot be damaged by sharp objects, mechanical moving parts and high heat sources. Failure to do so could result in damage to the system or vehicle and create possible safety concerns for the operator and passengers. Avoid placing the module where it could encounter strong magnetic fields from high current cabling connected to motors, solenoids, etc. Avoid radio frequency energy from antennas or inverters next to the module. Avoid high voltage spikes in vehicle wiring by always using diode clamped relays when installing upfitter circuits.

## Installation Instructions

**Disconnect vehicle battery before proceeding with the installation.**



**WARNING**  
Disconnect the battery to  
prevent setting a check engine  
light.

## Speed Sentinel Module

Remove the lower dash panel below the steering column area and find a suitable location to mount the Speed Sentinel module. Locate the module in an area away from any external heat sources (engine heat, heater ducts, etc.), Do not mount the module until all wire harnesses are routed and secure. The last step of installation is to mount the module.

## Accelerator Pedal T– Harness (Plug & Play)

1. Unplug the OEM harness from the accelerator pedal assembly.
2. Plug the OEM harness into the Speed Sentinel Accelerator Pedal T-harness.
3. Plug the Speed Sentinel Accelerator Pedal Harness into the OEM pedal assembly.
4. Ensure all connectors are secure. If connectors are equipped with Red locking tabs, ensure the tabs are in the locked position.
5. Plug the 12-Pin Speed Sentinel Pedal harness connector into the "Pedal" connector on the SS502-D module.



## LED Display Panel (SS502-D only)

Note: The SS502-DX does not include the LED Display Panel.

1. Locate a suitable position on the dashboard, within view of the driver, for the mounting of the LED display panel. It must be within 36 inches of the module and allow room for the LED harness installation.
2. Drill a  $\frac{3}{4}$ " hole in the dashboard where the center of the display will be located. Plug the 10-pin connector of the LED harness in connector cavity labeled "Display" on the SS502-D control module.
3. Run the other end of the harness under the dash and out through the  $\frac{3}{4}$ " hole. Plug the 6-pin connector of the display harness into the LED display panel. Ensure that the panel is level and secure using the supplied screws.



## Data Link Harness Installation

The Ford Super Duty has an OEM Gateway module located on the other side of the SYNC 4 module, which is behind the center console. Follow the steps below to access it:



## Installation Instructions (continued)

1. Remove the RH instrument panel trim using a trim removal tool. The trim starts at the ignition switch and ends at the silver clip. The glove compartment can be opened to better access the back side of the trim.



2. Using a trim removal tool, pop out the upper right corner of the lower steering column close out panel. Position it away from the center stack.



3. Remove the 4 bolts (Size: 7mm) located at the top of the center stack.




## Installation Instructions (continued)


4. Release the clips on both sides of the center stack using a trim removal tool. Position the center stack away from the mounting points.



5. Disconnect the 2 connectors behind the center stack.

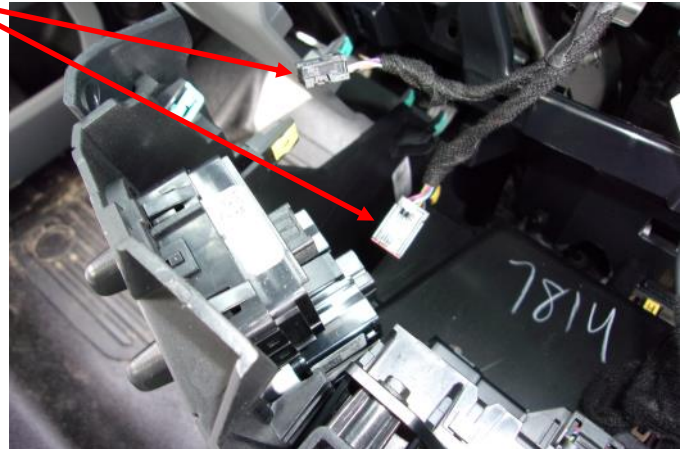

6. Detach the push-mount cable tie from the bracket and position the cable out of the way.

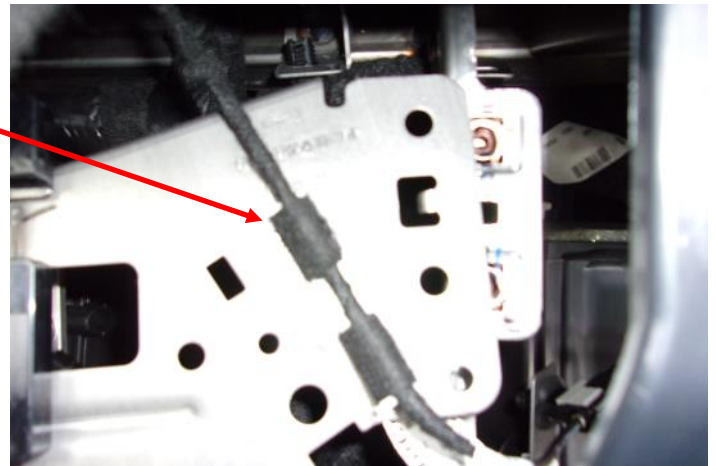


## Installation Instructions (continued)

7. Remove the 4 bolts (Size: 7mm) and position the bracket away from the mounting points to access the Gateway Module. The Gateway Module is located behind the bracket.



8. Disconnect the Gateway Connector by pressing down on the tab and pulling the connector away from the module.

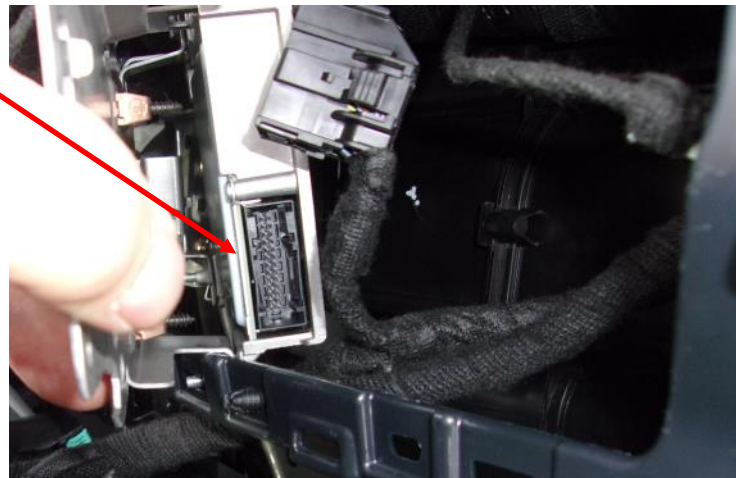

9. Install the Datalink Harness between the Gateway Module and the disconnected Gateway Connector.



10. Run the 6-pin connector of the datalink harness to the mounting location of the SS502 module.

11. After the Datalink Harness is installed, reverse the installation procedure to reassemble.

## Optional System Override Input

The activation of a chosen equipment (i.e. PTO) installed on the vehicle will activate the Speed Sentinel II. With deactivation of the chosen equipment, the Speed Sentinel II system will not function.

1. Connect the Auxiliary harness connector Pin #7 Blue wire lead to the chosen equipment output that will apply 12V to the "Auxiliary" connector Pin #7 when the chosen equipment is activated.
2. Insert the 8-pin Auxiliary connector into the module in the cavity labeled "Auxiliary".

## Setting Vehicle Speed Limit(s)

**Single/Dual mode:** Speed Sentinel can be set up for single or dual mode operation. In the dual-speed mode, two speeds can be set and used to limit the vehicle. Speed selection is determined by a discrete input voltage level at J3/Pin 7. A +12Vdc input on this pin selects Speed #2. If no voltage is present on this input, Speed #1 (primary) is selected. The Speed #1 setting is selected by the user using the rotary switch.

For single-speed mode, the rotary switch setting refers to the actual speed selection. In dual-speed mode, the switch setting refers to the primary speed (#1). The secondary speed (#2) is set by the factory (as requested by customers).

With power disconnected from the module, remove lid of the Speed Sentinel module. Locate the rotary switch and adjust the speed limit according to the chart shown. Speed Limit can be adjusted in 1 mph increments. Contact InterMotive for programming information.



**WARNING**



The Speed Sentinel II control module must be disconnected from the vehicle battery power during rotary switch adjustment.

0* = factory set (user specified)	8 = 45mph
1 = 10mph	9 = 50mph
2 = 15mph	A = 55mph
3 = 20mph	B = 60mph
4 = 25mph	C = 65mph
5 = 30mph	D = 70mph
6 = 35mph	E = 75mph
7 = 40mph	F = 80mph

## Reconnect vehicle battery

### Accelerator Pedal Calibration (required)

**Note:** Accelerator pedal calibration has changed from previous instructions. Use the following calibration technique for all Speed Sentinel modules with firmware versions 1.2.0.0 and higher.

#### Prior to calibration, ensure the following:

- Speed Sentinel pedal harness is installed
- Speed Sentinel Data Link connector is disconnected from module
- Key on, engine off

1. Hold down the Black calibration button on the Speed Sentinel module and plug in the 6 pin Data Link connector.
2. When Red fault light LED illuminates continuously, release the calibration button.
3. When Red LED flashes off and back on, press and hold accelerator pedal to the floor.
4. When Red LED goes off, calibration is complete and pedal can be released.

If the Red fault LED starts flashing, the calibration was unsuccessful. Repeat Steps 1-4. Once calibration is complete, connect a scan tool to the OBD II and check for diagnostic trouble codes (DTC's). If any codes are present, they must be cleared prior to delivery of the vehicle.



Calibration Button      Fault LED

### SS502 Module Mounting

Ensure all harnesses are properly connected and routed, and are not hanging below the dash area. Mount the Speed Sentinel module using screws or double sided tape. Reinstall all removed panels.

## Post Installation Instructions

**The following checks must be performed prior to releasing the vehicle to the driver.**

**Note:** If module is set for dual-speed mode, Speed Sentinel operation must be checked at each speed as described below.

1. Test drive the vehicle to verify proper Speed Sentinel operation. The Speed Sentinel must limit vehicle speed at the preset speed limit and pass the following steps:
2. When the Speed Sentinel engages (green LED will illuminate) and the vehicle speed is limited, press the accelerator pedal to wide-open throttle and verify that vehicle speed has been limited.
3. Ensure that the preset speed is set to the desired limit. (See Setting Vehicle Speed Limit(s) of the instructions for adjustment procedure).
4. Check passing mode operation by going from wide-open throttle to closed throttle three times in a three-second span. The Speed Sentinel passing mode will allow a temporary override of speed limiting. The override lasts for 10 seconds then resumes limiting vehicle speed. If enabled, the green LED will flash once after prove out. Passing mode is optional and may be removed by contacting InterMotive Technical Support.
5. If equipped with system override input, verify the Speed Sentinel activates when chosen equipment is activated.
6. Verify that the check engine light has not been set. (Turning the ignition switch to the "on" position with the accelerator pedal unplugged during installation will set a check engine light).

If the Speed Sentinel fails any step in the post installation test, review the installation instructions and check all connections. If necessary, call InterMotive Technical Support at (530) 823-1048.

**Submit product registration at [www.intermotive.net](http://www.intermotive.net)**

## Diagnostic Trouble Codes

- If the Speed Sentinel has a stored fault code, the "fault" LED will blink twice a second and codes can be retrieved by entering diagnostic mode.
- If the Speed Sentinel requires calibration with the vehicle, the "fault" LED will blink on for two seconds and off for a half second. Call InterMotive for assistance.
- If the Speed Sentinel has an internal programming fault, the "fault" LED will blink on/off rapidly. Call InterMotive for assistance.




## Entering Diagnostic Mode

- Diagnostic mode is entered by pressing and releasing the Yellow "Diag" button on the LED display. Once in diagnostic mode, all codes will be displayed by the blinking "fault" LED.
- The codes will be displayed as blink codes. For example, if there is 1 blink, a short pause, and then 2 blinks, the code is 1 2. These two sets of blinks are combined to form the code.
- A zero will not blink, so when the vehicle is safe (ready to be active) it will blink once every three seconds. Diagnostic codes will change depending on the safe status of the vehicle.

Clearing codes:

1. Place the vehicle in Park.
2. Press the Yellow "Diag" button and at the same time pump the service brake three times.

**Note:** The SS502-DX does not include the LED Display Panel. Fault Codes can be read at the module by pressing and releasing the calibration button and reading the Fault LED.

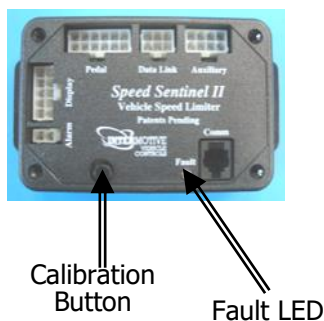

LED Code	Terminal Code	VSS state	Drive Train state	Service Brake state
1 - 0	10	> 0	In Drive	Not applied
1 - 1	11	> 0	In Drive	Applied
1 - 2	12	> 0	Not In Drive	Not applied
1 - 3	13	> 0	Not In Drive	Applied
1 - 4	14	= 0	In Drive	Not applied
1 - 5	15	= 0	In Drive	Applied
1 - 6	16	= 0	Not In Drive	Not applied
1 - 7	17	= 0	Not In Drive	Applied
1 - 8	18	> 0	In Drive	Not applied
1 - 9	19	> 0	In Drive	Applied
1 - 10	1A	> 0	Not In Drive	Not applied
1 - 11	1B	> 0	Not In Drive	Applied
1 - 12	1C	= 0	In Drive	Not applied
1 - 13	1D	= 0	In Drive	Applied
1 - 14	1E	= 0	Not In Drive	Not applied
1 - 15	1F	= 0	Not In Drive	Applied

Contact InterMotive for assistance with codes and diagnostics of the Speed Sentinel.



**LEAVE WITH VEHICLE**  
**Speed Sentinel™ Operating Instructions G-SS502-D, G-SS502-DX**  
**2021 Ford F150**  
**2023 Ford F250-F600 Series**

Contact InterMotive for specific engine applications.

The Speed Sentinel is a road speed limiter, which limits maximum vehicle speed to a preset limit. Once the driver attains the limited speed, any additional input on the throttle pedal will not increase the speed of the vehicle. If the throttle is pushed beyond the maximum speed, the Speed Sentinel will maintain the preset speed. The Speed Sentinel will maintain vehicle speed on varying terrain, much like a cruise control. However, while coasting down hills, the vehicle can exceed the limit since Speed Sentinel does not apply the vehicle brakes.

When the Speed Sentinel reaches the limited speed, the green LED (limit) on the LED Display will illuminate to show that maximum speed has been achieved. If the red LED is illuminated, a fault code is present and should be reported to the fleet manager.

Optional passing mode allows for a short-time override of the limited speed (for use in passing at critical moments). To verify passing mode is programmed, an extra "blink" on the green LED during prove out indicates passing mode is programmed. Passing mode is entered by going from wide-open throttle to idle three times in a three second span. The override lasts for 10 seconds then resumes limited vehicle speed. For SS502-DX (no LED panel), the passing mode function has to be performed in order to be verified.

The Speed Sentinel also has a mode that will return the engine to base idle if the service brake is applied at the same time as the accelerator pedal. This mode will only activate while the Speed Sentinel is limiting vehicle speed. To remove Speed Sentinel from this mode: release and reapply the accelerator pedal to reactivate control of the accelerator pedal. This can be done anytime after this mode has been activated.

Optional Dual Speed mode allows 2 speeds to be limited by a flip of a switch. For instance, a truck with a snow plow may have a primary speed limited at 55 MPH, but when the plow is down, the vehicle is limited to 20MPH.

**WARNING**

Do NOT press and hold the accelerator pedal all the way to the floor while Speed Sentinel is active and limiting speed. If the Speed Sentinel is disabled for any reason, it will stop limiting speed and the driver will immediately be in control of the accelerator. Sudden acceleration may occur if the pedal is held all the way to the floor, and Speed Sentinel becomes disabled.

## Diagnostic Trouble Codes

- If the Speed Sentinel has a stored fault code, the "fault" LED will blink twice a second and codes can be retrieved by entering diagnostic mode.
- If the Speed Sentinel requires calibration with the vehicle, the "fault" LED will blink on for two seconds and off for a half second. Call InterMotive for assistance.
- If the Speed Sentinel has an internal programming fault, the "fault" LED will blink on/off rapidly. Call InterMotive for assistance.




## Entering Diagnostic Mode

- Diagnostic mode is entered by pressing and releasing the Yellow "diag" button on the LED display. Once in diagnostic mode, all codes will be displayed by the blinking "fault" LED.
- The codes will be displayed as blink codes. For example, if there is 1 blink, a short pause, and then 2 blinks, the code is 1 2. These two sets of blinks are combined to form the code.
- A zero will not blink, so when the vehicle is safe (ready to be active) it will blink once every three seconds. Diagnostic codes will change depending on the safe status of the vehicle.

Clearing codes:

1. Place the vehicle in Park.
2. Press the yellow "Diag" button and at the same time pump the service brake three times.




**Note:** The SS502-DX does not include the LED Display Panel. Fault Codes can be read at the module by pressing and releasing the calibration button and reading the Fault LED.

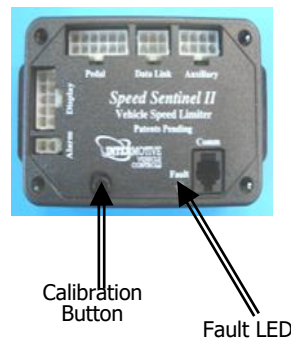

LED Code	Terminal Code	VSS state	Drive Train state	Service Brake state
1 - 0	10	> 0	In Drive	Not applied
1 - 1	11	> 0	In Drive	Applied
1 - 2	12	> 0	Not In Drive	Not applied
1 - 3	13	> 0	Not In Drive	Applied
1 - 4	14	= 0	In Drive	Not applied
1 - 5	15	= 0	In Drive	Applied
1 - 6	16	= 0	Not In Drive	Not applied
1 - 7	17	= 0	Not In Drive	Applied
1 - 8	18	> 0	In Drive	Not applied
1 - 9	19	> 0	In Drive	Applied
1 - 10	1A	> 0	Not In Drive	Not applied
1 - 11	1B	> 0	Not In Drive	Applied
1 - 12	1C	= 0	In Drive	Not applied
1 - 13	1D	= 0	In Drive	Applied
1 - 14	1E	= 0	Not In Drive	Not applied
1 - 15	1F	= 0	Not In Drive	Applied

Contact InterMotive for assistance with codes and diagnostics of the Speed Sentinel.

U.S. Patent #9,469,261

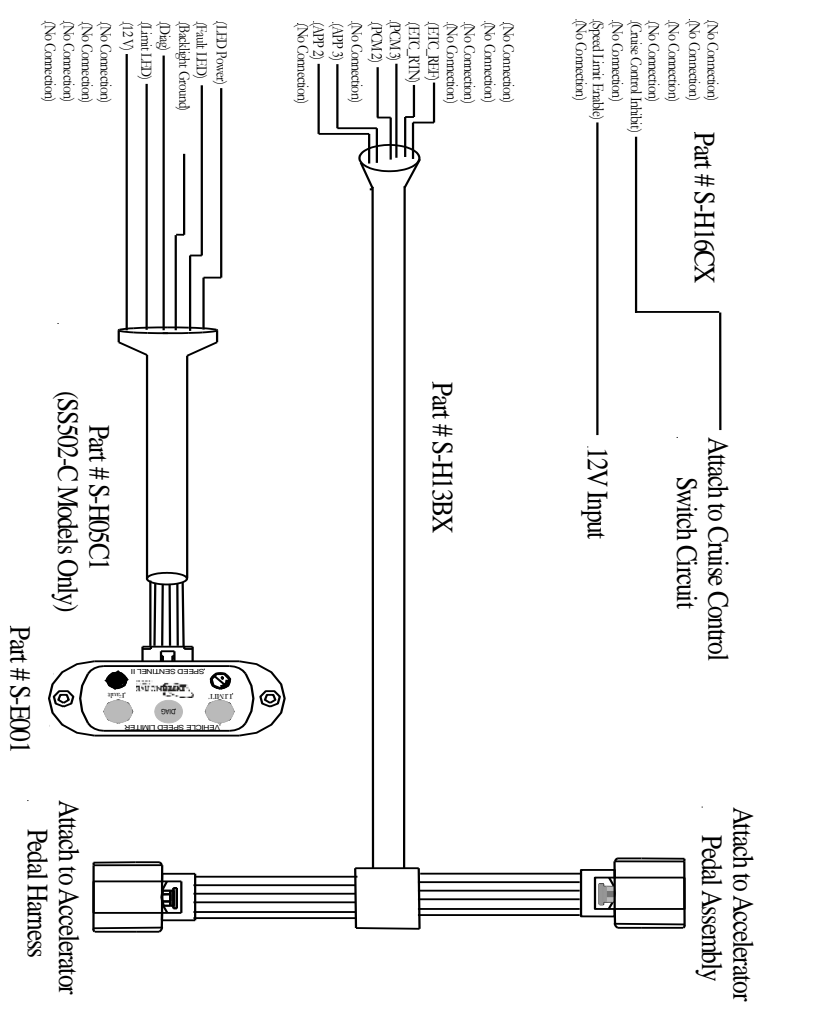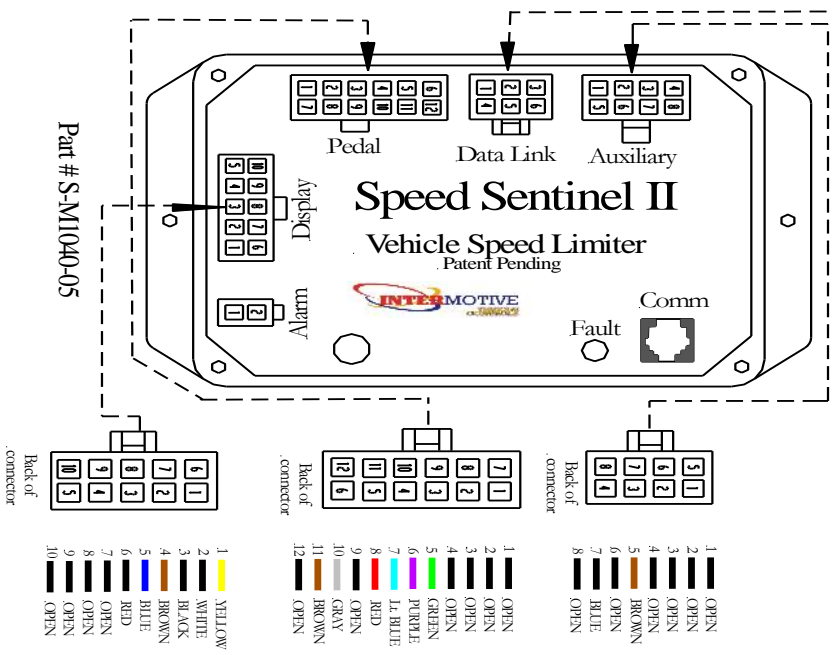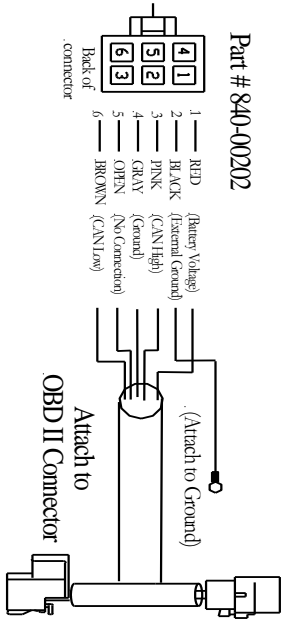

**If the Speed Sentinel II fails any step in the post installation test, review the installation instructions and check all connections. If necessary, call InterMotive Technical Support at (530) 823-1048**