


A-AFIS707VSX-B Fast Idle System—Work Truck Application

2013 - 2017 RAM 2500 - 5500 - 6.4L and 6.7L Engines
2015 - 2017 2500 - 5500 - 6.7L Engine
2019 Ram Promaster

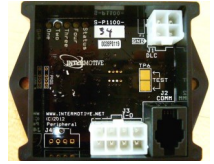

System Operation

The A-AFIS707VSX-B is a Fast Idle system that elevates engine idle RPM based on a number of “triggers.” The vehicle must be in Park for Fast Idle to engage.

Additional Option

A-AFIS707VSX-BP-“T” data link harness

IMPORTANT—READ BEFORE INSTALLATION

It is the installer’s responsibility to route and secure all wiring harnesses where they cannot be damaged by sharp objects, mechanical moving parts and high heat sources. Failure to do so could result in damage to the system or vehicle and create possible safety concerns for the operator and passengers. Avoid placing the module where it could encounter strong magnetic fields from high current cabling connected to motors, solenoids, etc. Avoid radio frequency energy from antennas or inverters next to the module. Avoid high voltage spikes in vehicle wiring by always using diode clamped relays when installing upfitter circuits.

Installation Instructions

Disconnect vehicle battery before proceeding with installation.



WARNING
Disconnect the battery to
prevent setting a check engine
light.

A-AFIS707VSX-B Module

Remove the lower dash panel below the steering column area and find a suitable location to mount the module so that the Diagnostic LED’s can be viewed with the lower dash panel removed. Secure using 2-sided foam tape, screws or wire ties. Locate the module in an area away from any high heat sources. Do not actually mount the module until all wire harnesses are routed and secure (last step of the installation is to mount the module).

A-AFIS707VSX-B Data Link Harness

1. Locate the vehicle’s OBDII Data Link Connector, mounted below the lower left dash panel.
2. Plug the Red connector from the AFIS Data Link Harness into the vehicle OBDII connector. Ensure the connection is fully seated and secure the connectors together with the supplied wire tie.
3. Secure the A-AFIS707VSX-B Data Link harness so that it does not hang below the lower dash and plug the 4-pin connector from the Data Link Harness into the 4-Pin connector on the A-AFIS707VSX-B module.



Optional A-AFIS707VSX-BP "T" Data Link Harness

1. Locate the vehicle OBDII Data Link Connector. It's a black 16 pin connector around the area above the drivers left foot.
2. Use a flat screwdriver to remove the OEM OBDII connector. There are tabs on the sides of the connector that allow it to snap into place. Press the tabs and push the connector up and out of its bracket. The AFIS kit includes a Data Link harness (see picture). Plug the red connector from the AFIS Data Link Harness into the vehicle's OBDII connector. Ensure the connection is fully seated and secured with the supplied wire tie.
3. Mount the white connector from the AFIS Data Link Harness in the former location of the vehicle's OBDII connector, by snapping it into place.




AFIS Data Link harness "T's" into OBDII connector.

AFIS Harness (8-Pin Connector)

Fast Idle Engage Inputs

1. Attach the AFIS Harness connector Pin #8 Green wire to any equipment that provides a ground signal when the fast idle needs to be engaged. (PTO, pump, etc....)
2. Plug the 8-pin connector from the AFIS harness into the 8-pin connector on the module.

Note: The "sense" of the Green wire can be programmed (see instructions below). This alternatively allows equipment which provides a 12V "active" signal to be connected to this input.

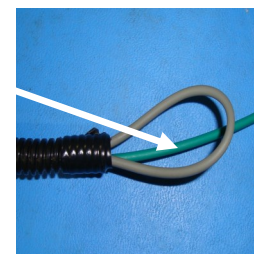

Engage Input —Fast Idle Pin-8 Trigger, Active: Ground or 12V signal Enable/Disable

The module is configured from the factory for an active ground fast idle trigger. To change this to an active 12V trigger:

Turn the key on (engine Off), place the transmission in Park, ground the Gray wire on the 8-pin connector, and press the Service Brake four times within 10 seconds. Upon successful reprogramming, the LEDs will flash as a confirmation. The user must cycle the key for the change to take affect. Repeat to reverse back to a ground trigger.

VBAT Low Fast Idle Trigger Disable, Black wire loop


The system is configured from the factory for Fast Idle to be triggered when the battery voltage (VBAT) drops below 12.5V. If the VBAT Low Fast Idle Trigger is not desired, it can be disabled by cutting the Black wire loop on the 8-Pin connector between Pin #1 and Pin #3.



Configurable Idle Speed (Gray wire)

The A-AFIS707VSX-B allows the user to change the fast idle RPM during installation. The default speed is 1500 RPM gas / 1500 Diesel, but any speed between 900 RPM and 2000 RPM can be selected in 50 RPM increments.

1. To change the idle speed, locate the Gray wire in the harness which connects to the 8 pin Molex connector.
2. Pull this wire out of the loom to expose the bare copper end. Place the vehicle in Fast Idle by grounding the Manual Trigger Green wire.
3. With the engine in Fast Idle, momentarily grounding the Gray wire (RPM Configuration input) increases the idle speed by 50 RPM. When the idle speed reaches the maximum allowable speed for the particular engine, it will roll back around to 900 RPM. Wherever the user stops, this RPM becomes the new default Fast Idle speed, even through key cycles.
4. After the vehicle is set to the desired fast idle speed, trim off the exposed copper end and insert the end of the Gray wire into the harness tubing and use tape to secure.

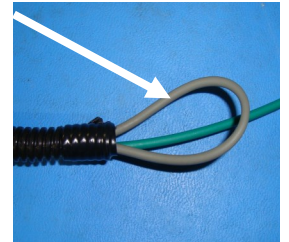

Note: When configuring the idle speed, the engine RPM will momentarily drop before ramping back up to the new level. This is normal behavior

Note: Some vehicle PCM's will limit Fast Idle to less than 2000 RPM. Continue to momentarily ground the Gray wire and the RPM will eventually roll back around to 900 RPM. Do not leave the RPM's set in a range that the engine RPM is not responding to as this may cause Fast Idle issues.

Note: After 4 minutes of continuous idling, the RPM will drop for a brief moment and return to fast idle.

Park Brake Fast Idle Trigger Enable/Disable

The module is configured from the factory for Fast Idle **not** to be triggered when the Park Brake is applied. If the Park Brake Fast Idle trigger is desired, it may be enabled (or disabled) by the following procedure:

With key on, place the transmission in neutral, apply the Park Brake, and press the Service Brake three times within 5 seconds.

Upon successful reprogramming, the on-board LEDs will briefly flash as a confirmation. Cycle the key for the change to take affect.

A/C Fast Idle Trigger

The A-AFIS707VSX-B is configured from the factory for Fast Idle to be triggered when the A/C clutch is engaged and will stay engaged until the next key cycle, or a precondition is violated.

Post Installation System Operation Test

Perform the following tests before actually mounting the module, to allow easy viewing of the diagnostic LED's, if needed.

1. Place transmission in Park and start the engine. **NOTE:** Vehicle may enter Fast Idle if VBAT is low. Either wait to see if the battery charges and Fast Idle stops, or place a charger on the vehicle to disable the VBAT low trigger to allow testing of other triggers.
2. Manually engage Fast Idle by having aftermarket vehicle equipment ground the Green wire. Engine speed will increase to the set RPM level. If this does not occur, check harness connections. Also see diagnostics below.
3. When Fast Idle is engaged, keep the Green wire grounded, and depress the Service Brake for 1 second. Fast idle will temporarily disengage anytime the Service Brake is depressed, but will automatically reengage after approximately 2 seconds once the Brake pedal is released.
4. Place transmission shift lever in the "Neutral" position. (Green wire still grounded). Verify the system does not activate Fast Idle.

If the A-AFIS707VSX-B fails any of the above tests, check harnesses and review instructions, or check diagnostics below. If necessary, call InterMotive Technical Support at (530) 823-1048.

Diagnostics

Diagnostic mode is entered by momentarily shorting the pads labeled "Test" on the module. The module provides diagnostic LEDs which illuminate according to the following table. To exit this mode, cycle the key or momentarily ground the "Test" pad again.



Fast Idle Status Codes

Status Codes provide the current status of the Fast Idle system. The on-board "Status" LED will flash a 2-digit code as shown in the table. The first digit will flash, wait one second, flash the second digit, then wait four seconds before the next code. The Status Codes continue to flash until the module is reset (cycle key), or the test input is momentarily grounded again.

LED #	Diagnostic Mode LED Descriptions
1	On when fast idle is engaged
2	On when any input trigger wire is active
3	On when Gray RPM set wire is grounded
4	On when the Parking Brake is applied with the parking brake trigger enabled
STATUS	Continuously flashes two digit status codes. See Status Code table

AFIS Status Codes	
Status Code	Description
1-1	Ready for fast idle
2-3	Triggered: Parking Brake
2-4	Triggered: VBAT Low
2-5	Triggered: A/C Boost
2-8	Triggered: Manual Input
3-1	RPM > 2800
3-2	RPM < 200
3-3	TR not = to PARK
3-4	VSS not = to 0 MPH
3-5	Service Brake applied
3-7	Unsafe; Need to cycle TR
3-8	ECT > 230° F

Module Mounting

Ensure all harnesses are properly connected and routed, and are not hanging below the dash area. Mount the A-AFIS707VSX-B module using screws or double sided tape. Reinstall the lower dash panel.



An ISO 9001:2015 Registered Company

Leave in vehicle Operating Instructions A-AFIS707VSX-B Fast Idle System - Work Truck 2013 - 2017 RAM 2500 - 5500 - 6.4L and 6.7L Engines 2015 - 2017 RAM 2500 - 5500 - 6.7L Engine 2019 Ram Promaster

System Operation

The Advanced Fast Idle System (AFIS) elevates engine idle speed in response to a number of "triggers" in order to assist electrical or mechanical systems on the vehicle.

Fast Idle may be initiated by either a manual trigger (Input wire being grounded), a low battery voltage (low VBAT) condition, or if enabled, by setting the Park Brake.

Fast Idle will only occur when the required preconditions are met, as listed below. Fast Idle operation will be terminated by a loss of **any** of the preconditions, or removal of the trigger(s).

Fast Idle Triggers		
Trigger Name	Trigger Conditions	Disable Conditions
Manual Engage	Fast Idle Engage Green wire grounded Or 12V input enabled (based on setting)	Fast Idle Engage Green wire not grounded Or not 12V based on setting
VBAT Low	VBAT < 12.5V	Precondition Violation
Parking Brake	Parking Brake applied	Parking Brake Released
A/C Boost	A/C Clutch (engaged)	Precondition Violation

Fast Idle Preconditions

The following preconditions must be met prior to initiating Fast Idle operation:

- Vehicle speed zero
- Transmission in Park
- Accelerator pedal must not be applied
- Engine Coolant temperature less than 230°F
- Engine RPM must be greater than 200 and less than 2800.
- Service Brake not applied

Note: After 4 minutes of continuous idling, the RPM will drop for a brief moment and return to fast idle.

Upfitter Options -The following are configurable when the module is installed. The default values are:

A-AFIS707VSX-B


Idle RPM: 1500 gas / 1500 Diesel

VBAT Low: 12.5V

A/C Trigger: Enabled

Parking Brake Trigger: Disabled


AFIS706/707VVSX-B Data Link Harness
 Harness Part # S-H 35AX

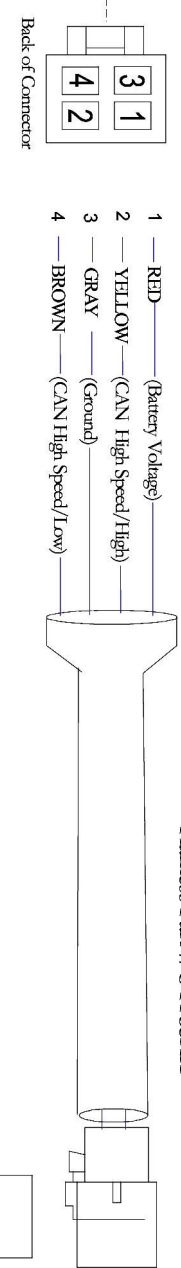

- 1 — RED — (Battery Voltage)
- 2 — YELLOW — (CAN High Speed/High)
- 3 — GRAY — (Ground)
- 4 — BROWN — (CAN High Speed/Low)


Data Link Harness-
 Attach To OEM OBDII
 Connector

Optional AFIS706/707VVSXP-B Data Link Harness
 Harness Part # S-H 07FX

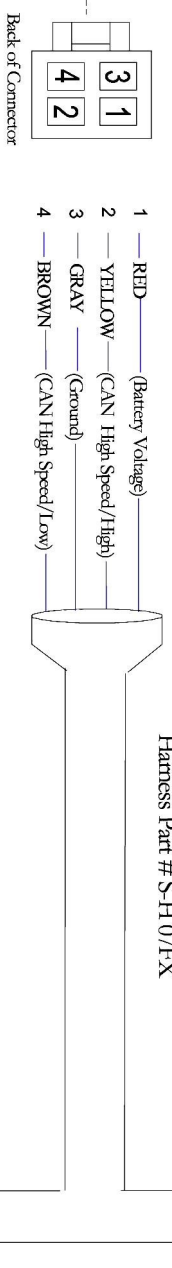


- 1 — RED — (Battery Voltage)
- 2 — YELLOW — (CAN High Speed/High)
- 3 — GRAY — (Ground)
- 4 — BROWN — (CAN High Speed/Low)

Pass Through OBDII
 Connector

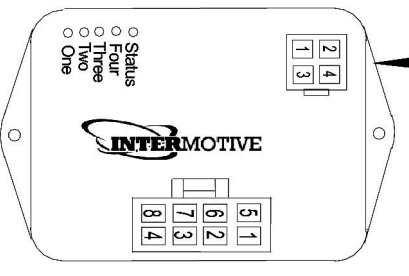

Harness Part # S-H 38AX

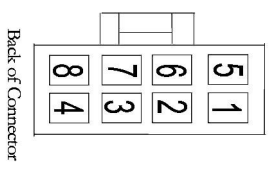

- 1 — BLACK — VBAT Low Trigger
- 2 — N/C
- 3 — BLACK — RPM Configuration (ground input)
- 4 — GRAY
- 5 — N/C
- 6 — N/C
- 7 — N/C
- 8 — GREEN — Fast Idle Engage Input 1 (active ground input)(default)

AFIS707VVSX-B
 Part # S-M1100-46

Submit product registration at www.intermotive.net

If the A-AFIS707VVSX-B fails any step in the System Operation Test, review the installation instructions and check all connections. If necessary, call InterMotive Technical Support at (530) 823-1048.